

TRUCK SPARE PARTS

Gesuchte Europäische Qualität

AIRCOMPRESSOR

sought-after
quality

SHOCK ABSORBER



KLÖTZE
TECHNIC

www.klotzetechnik.de

Klötze Technic ist ein in Deutschland ansässiger Hersteller und Lieferant von LKW-, Anhänger- und Bus-Ersatzteilen.



KLÖTZE
TECHNIC

Gesuchte Europäische
Qualität

Klötze Technic is a Germany-based company specializing in truck, trailer, and bus spare parts. Together with our sales office in Turkey, we provide our customers with original spare parts of guaranteed quality. Our products are manufactured with superior German engineering.

Our main groups consist of Engine, Cooling System, Fuel System, Exhaust System, Clutch & Pedal, Gearbox, Propeller Shaft, Axles, Brake System, Hubs & Wheels, Suspension, Steering, Electrical System, Cabin, and Body.

At Klötze Technic, we strive to provide our customers with the highest quality products, competitive prices, and superior customer service.

Our Mission:

At Klötze Technic, we work to provide our customers with the highest quality and reliable spare parts for trucks, trailers, and buses.

Our high-quality products are manufactured with superior German engineering.

Our mission is to meet our customers' needs and provide them with the best customer service possible.

Our Vision:

At Klötze Technic, we aim to become a world-leading company in the field of truck, trailer, and bus spare parts.

Our vision is to provide our customers with the highest quality products, competitive prices, and superior customer service. In doing so, we aim to meet our customers' needs and ensure their satisfaction.

Our Quality Policy:

At Klötze Technic, quality and customer satisfaction are always our top priorities. Our products are manufactured with superior German engineering and are provided to our customers as original spare parts of guaranteed quality. Our quality policy is to provide our customers with the best quality products and meet their needs in the best way possible.

Customer satisfaction is always important to us.

TRUCK SPARE PARTS



KLÖTZE
TECHNIC

Gesuchte Europäische
Qualität



TRUCK SPARE PARTS

www.klotzetechnik.de

INDEX



TRAILER

7-14

MERCEDES BENZ

15-31

MAN

32-44

RVI

45-50

SCANIA

51-60

DAF

61-66

VOLVO

67-76

IVECO

77-85

KEY LIST

90-101

SHOCK ABSORBER





KT No.	Replaces Ref. No:	Description	Model / Details
KLÖTZE TECH. NO: KT29023		OEM NO 237027000 -237228900 -237228902 2376002700 -2376003500 -196121 013774 -016270	
		REFERENCE NO SACHS 170181 -312978	
		MONROE F5190	
		MAX. - MIN.: 429 - 291	
		BPW-GIGANT-SAF-SCHMITZ CARGOBULL	
KLÖTZE TECH. NO: KT28547		OEM NO 237228300 -237228302 -237229000 237021600 -237021900 -237025200 237023600 -237220400 -1336821	
		REFERENCE NO SACHS 170182 - 125442	
		MONROE F5004	
		MAX. - MIN.: 497 - 328	
		BPW-DAF-GIGANT-SAF-SCHMITZ CARGOBULL	
KLÖTZE TECH. NO: KT27168		OEM NO 237025100 -237024800	
		REFERENCE NO SACHS 170177	
		MONROE F5008 - F5009	
		MAX. - MIN.: 700 - 430	
		BPW	
KLÖTZE TECH. NO: KT28545		OEM NO 237021000 -1336819 -1336820 2376001900 -237026700 30000216 - 001405 - 014050 237021800 -700196116	
		REFERENCE NO SACHS 101823	
		MONROE F5126	
		MAX. - MIN.: 800 - 480	
		BPW-SCHMITZ CARGOBULL	
KLÖTZE TECH. NO: KT28545		OEM NO 237026700 -237021800 -237601900 30000216 -1006613 - 196116 - 014050	
		REFERENCE NO SACHS 170183 -106201	
		MONROE F5002	
		MAX. - MIN.: 767 - 467	
		BPW-BOLGAN- GIGANT-SAF- SCHMITZ CARGOBULL-ZORZI	
KLÖTZE TECH. NO: KT27168		OEM NO 91610259 -91610264 -91610266 91610267 -91610275 -91610279 91610269 -91610272 -91610274	
		REFERENCE NO SACHS 300069 -314599	
		MONROE F5007	
		MAX. - MIN.: 696 - 426	
		BATTAGLINO-BERTOJA-BPW-CALABRESE-LECITRAILER- MIELE-MISTRALL- ROLFO-SCHMITZ CARGOBULL-VIBERTI	



Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT29768</p> <p>OEM NO 237028300 -2376100500</p> <p>REFERENCE NO SACHS 170200</p> <p>MONROE F5185</p> <p> BPW-SAF</p>	 <p>MAX. - MIN.: 655 - 415</p>	<p>KLÖTZE TECH. NO: KT43445</p> <p>OEM NO 237021400</p> <p>REFERENCE NO SACHS 112923</p> <p>MONROE F1113</p> <p> BPW</p>	 <p>MAX. - MIN.: 646 - 406</p>
<p>KLÖTZE TECH. NO: KT27181</p> <p>OEM NO 2376007000 2376007001 1012386</p> <p>REFERENCE NO SACHS 312668</p> <p>MONROE F5174</p> <p> ACHSE-SAF- SCHMITZ CARGOBULL</p>	 <p>MAX. - MIN.: 410 - 281</p>	<p>KLÖTZE TECH. NO: KT27760</p> <p>OEM NO 126507007799 - 2607000 423016002 - 42301600200 445101010 - 445101013 30001002 30001003 LEI160500/500/52</p> <p>REFERENCE NO SACHS 290463 - 170192 -123840 300079 - 290467</p> <p>MONROE F5075</p> <p> BATTAGLINO-BERTOJA-BOLGAN-KAISER-MERITOR / ROR / ROCKWELL-MERITOR / ROR / ROLFO / ROCKWELL-MERITOR / ROR / ROLFO / ROCKWELL / LEGRAS-O.M.T-WEWELER-WEWELER / KRÜGER-SCHMITZ CARGOBULL-ZORZI</p>	 <p>MAX. - MIN.: 429 - 294</p>
<p>KLÖTZE TECH. NO: KT43444</p> <p>OEM NO 91610011 051075 9822 M01120000 11044002 3753200230 0003200931</p> <p>REFERENCE NO SACHS 300083</p> <p>MONROE</p> <p> BARTOLETTI-FIA CESCHI-MECCANICA MURGIANA-STEFEN ASSALI-TECMA-MERCEDES AXOR 3228, 3240</p>	 <p>MAX. - MIN.: 555 - 355</p>	<p>KLÖTZE TECH. NO: KT27761</p> <p>OEM NO 10490505651 - LEI180002700/52G23 7800 - 21208363 - 21216058 5000790689 - 8404174 -02376000500 2376007102 - 14134 -2376001800 12486 -2376000600 -2376000500 2376000800 - 503075 - 503076</p> <p>REFERENCE NO SACHS 170191 -280508 -290468 -123779</p> <p>MONROE F5020 -T5016 -F5013</p> <p> FRUEHAUF-KAISER-LANGENDORF-MERITOR- ROR-RVI-SAF-WEWELER</p>	 <p>MAX. - MIN.: 475 - 315</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT28546

OEM NO
2376007100 -2376007101
2376007102 - 017917



REFERENCE NO
SACHS
312669

MONROE
F5175



MAX. - MIN.: 490 - 318

ACHSE-SAF-SCHMITZ CARGOBULL

KLÖTZE TECH. NO: KT43443

OEM NO
99391004 - 2605100 - 21212534
F28960400 - 99020001 - 01070460
M01110085



REFERENCE NO
SACHS
310009 -300070 - 290466 - 290464

MONROE
F5344



MAX. - MIN.: 635 - 399

AUSTERAS-BATTAGLINO-MERITOR ROR- SIRMAC SIMA-ADR-GIRELLI-STEFEN

KLÖTZE TECH. NO: KT27068

OEM NO
8404174 -2376001000 -2376001400
2376001002 -2376001001
2376001500 - 2376002900 - 12486
14134



REFERENCE NO
SACHS
312979 -170198 -170191 -290468
- 123779

MONROE
F5254



MAX. - MIN.: 474 - 314

LF SERIES-SAF- SCHMITZ CARGOBULL

KLÖTZE TECH. NO: KT43442

OEM NO
16508 - 1086689 - 1093975
D8A912565S - UR600087 - 912565



REFERENCE NO
SACHS
314347

MONROE
F5172



MAX. - MIN.: 385 - 269

SCHMITZ (NORMAL KAFA)

KLÖTZE TECH. NO: KT30015

OEM NO
D8A912801 - UR600088 - 1008054
1086690 - 1093977 - 912801



REFERENCE NO
SACHS
314765

MONROE
F5376



MAX. - MIN.: 383 - 267

SCHMITZ (NORMA KAFA)

KLÖTZE TECH. NO: KT29849

OEM NO
16508 - 1086689 - 1093975
D8A912565S - UR600087 - 912565



REFERENCE NO
SACHS
314347

MONROE
F5172



MAX. - MIN.: 385 - 269

SCHMITZ (DÖVME KAFA)



Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43446</p> <p>OEM NO D8A912801 UR600088 1008054 1086690 1093977 912801</p> <p>REFERENCE NO SACHS 314765</p> <p>MONROE F5376</p>  <p>SCHMITZ (DÖVME KAFA)</p>	 <p>MAX. - MIN.: 383 - 267</p>	<p>KLÖTZE TECH. NO: KT29850</p> <p>OEM NO 2376007200 2376007201 1021298</p> <p>REFERENCE NO SACHS 312670</p> <p>MONROE F5176</p>  <p>SAF-SCHMITZ CARGOBULL</p>	 <p>MAX. - MIN.: 532 - 339</p>
<p>KLÖTZE TECH. NO: KT29860</p> <p>OEM NO 21224778 21226989 1134526</p> <p>REFERENCE NO SACHS</p> <p>MONROE F5164</p>  <p>ROR - MERITOR - SCHMITZ CARGOBULL</p>	 <p>MAX. - MIN.: 375 - 273</p>	<p>KLÖTZE TECH. NO: KT43447</p> <p>OEM NO M015236 128711301</p> <p>REFERENCE NO SACHS 290427</p> <p>MONROE</p>  <p>FREUHAUF - AXLE - ADIGE - VIBERTI</p>	 <p>MAX. - MIN.: 422 - 287</p>
<p>KLÖTZE TECH. NO: KT29468</p> <p>OEM NO Y508571 11048 508571 AM758571 21224745 902368 21222271 21224331 -21224531</p> <p>REFERENCE NO SACHS 315152 -665008 - 314346</p> <p>MONROE F5015</p>  <p>HENDRICKSON - AUSTERAS - ROR - MERITOR-SAF</p>	 <p>MAX. - MIN.: 428 - 300</p>	<p>KLÖTZE TECH. NO: KT29852</p> <p>OEM NO 237228800 2376003100 237228802 237229200 2376003100 16271 13290 1079383</p> <p>REFERENCE NO SACHS 312977 -112925</p> <p>MONROE F5012</p>  <p>3/0 - 13 T - BPW - SAF</p>	 <p>MAX. - MIN.: 541 - 351</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT43448

OEM NO
4288 - 112297 - A06030510

REFERENCE NO SACHS
125743 - 290443 -

MONROE
F5221



KAISER - ROLFO - LOHR

MAX. - MIN.: 483 - 326

KLÖTZE TECH. NO: KT43450

OEM NO
449751 - 21223345 - F3041A -
M01121030 - 051101 - 1006604
11044001 - 354F002 - 7759

REFERENCE NO SACHS
290464 - 300076

MONROE
F5343



ACERBI-ASSE SANSAVINI- STEFEN ASSALI-ZORZI-TECMA-MERITOR - ROR-FAD-GIRELLI-AUSTERAS-BATTAGLINO- ROCKWELL

MAX. - MIN.: 552 - 353

KLÖTZE TECH. NO: KT43449

OEM NO
2500001 - 2500341
503100 - 40050

REFERENCE NO SACHS
130034

MONROE
F5201



SAMRO-TRAX

MAX. - MIN.: 475 - 317

KLÖTZE TECH. NO: KT43451

OEM NO
431806 - 126502007352 - 1518588 - 1521533
152786 - 1527867 - 23514 - 503700 - 680117
74405 - 905180 - BJB0180001 - M007942
S09603030 - S09605130 - UCE1295
UJA0878001 - UJB 0179 - UJB 0316 - UJB
0562 - UJB0177 - UJB0177001 - UJB0179
UJB0316 - UJB0562 - UJC0020 - UJC002001
UJC0054 - UJZ7093 - W4012762

REFERENCE NO SACHS
290444

MONROE
F5085



ACERBI TRAILER AXLE - FRUEHAUF - GIGANT

MAX. - MIN.: 463 - 311

KLÖTZE TECH. NO: KT43455

OEM NO
M0044020 - M0044020H
M0078602 - 078602

REFERENCE NO SACHS

MONROE
F5166



FRUEHAUF TYPE AIR SUSPENSION

MAX. - MIN.: 360 - 263

KLÖTZE TECH. NO: KT43452

OEM NO
10041749

REFERENCE NO SACHS

MONROE



ROR - MERITOR HORIZONTAL AXLE

MAX. - MIN.: 553 - 365



Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43453</p> <p>OEM NO 21039006</p> <p>REFERANCE NO SACHS</p> <p>MONROE</p>  <p>ALKO HORIZONTAL</p>	 <p>MAX. - Min.: 366 - 269</p>	<p>KLÖTZE TECH. NO: KT43454</p> <p>OEM NO 2376007301</p> <p>REFERANCE NO SACHS</p> <p>MONROE F5401</p>  <p>SAF INTRADISC</p>	 <p>MAX. - Min.: 460 - 300</p>
<p>KLÖTZE TECH. NO: KT29851</p> <p>OEM NO 1526855 - 431489 - 448897 449071 - M001537 - M007950 M076480 - M200052 - M200133 UJB0364 - UJB0563 - UJB0565</p> <p>REFERANCE NO SACHS 280498</p> <p>MONROE F5084</p>  <p>FREUHAUF TRAILER AXLE</p>	 <p>MAX. - Min.: 474 - 319</p>	<p>KLÖTZE TECH. NO: KT28569</p> <p>OEM NO 14118-14750 237220400 2376002600</p> <p>REFERANCE NO SACHS 125442</p> <p>MONROE F5224</p>  <p>SAF EM-311/411 EO-314/414-BPW</p>	 <p>MAX. - Min.: 496 - 326</p>
<p>KLÖTZE TECH. NO: KT21134</p> <p>OEM NO</p> <p>REFERANCE NO SACHS</p> <p>MONROE</p>  <p>TRAILER</p>	 <p>MAX. - Min.: 469 - 327</p>	<p>KLÖTZE TECH. NO: KT21135</p> <p>OEM NO</p> <p>REFERANCE NO SACHS</p> <p>MONROE</p>  <p>TRAILER 24 MM (230 856) SHORT</p>	 <p>MAX. - Min.: 470 - 314</p>



KT No.	Replaces Ref. No:	Description	Model / Details
KLÖTZE TECH. NO: KT43456 OEM NO 1522341 - UJC0027001 REFERANCE NO SACHS MONROE  FREUHAUF TRAILER AXLE		 MAX. - MIN.: 385 - 277	
		KLÖTZE TECH. NO: KT43457 OEM NO D8A91-2640W REFERANCE NO SACHS MONROE  WEWELER SHOCK ABSORBER (DÖVME KAFA)	 MAX. - MIN.: 450 - 305
KLÖTZE TECH. NO: KT43458 OEM NO D8A91-2640W - 1 REFERANCE NO SACHS MONROE  WEWELER SHOCK ABSORBER (NORMAL KAFA)		 MAX. - MIN.: 450 - 305	
		KLÖTZE TECH. NO: KT43459 OEM NO 2376007000 2376007001 1012386 REFERANCE NO SACHS 312668 MONROE F5174  ACHSE-SAF-SCHMITZ CARGOBULL (DÖVME KAFA)	 MAX. - MIN.: 410 - 281
KLÖTZE TECH. NO: KT28546 OEM NO 2376007100 2376007101 2376007102 017917 REFERANCE NO SACHS 312669 MONROE F5175  ACHSE-SAF-SCHMITZ CARGOBULL (DÖVME KAFA)		 MAX. - MIN.: 490 - 318	
		KLÖTZE TECH. NO: KT29850 OEM NO 2376007200 2376007201 1021298 REFERANCE NO SACHS 312670 MONROE F5176  ACHSE-SAF-SCHMITZ CARGOBULL (DÖVME KAFA)	 MAX. - MIN.: 532 - 339

www.klotzetechnik.de

MERCEDES SHOCK ABSORBER





KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO: KT27834

OEM NO
0053266000 - 0053266400
0053266600 - 0063262400
0063266800 - 9583260700
0003201630



REFERENCE NO
SACHS
124638

MONROE
T5372



ACTROS 1824 - 4844 / AXOR 3028 - 4144

MAX. - MIN.: 896 - 536

KLÖTZE TECH. NO: KT27830

OEM NO
0063269900 - 0053260900
0053265700 - 0053265800
0053265900 - 0053266300
0063266700 - 9583260900



REFERENCE NO
SACHS
124567

MONROE
T1201



ACTROS 1824 - 4844 / AXOR 3028 - 4144 / ATEGO 2628

MAX. - MIN.: 856 - 516

KLÖTZE TECH. NO: KT27853

OEM NO
0053261100
0053262500
0063266000
0053267400
0063260100



REFERENCE NO
SACHS
124359 - 124361 - 131623

MONROE
T5171 - T5414



ACTROS 1824-2665 / ATEGO 1823 - 1929 / AXOR 1823 - 2044

MAX. - MIN.: 726 - 446

KLÖTZE TECH. NO: KT27825

OEM NO
0053261200
0063265600
0053266800
0063262900
3753260000



REFERENCE NO
SACHS
124360

MONROE
T5137



ACTROS 1824-2665 / ATEGO 1823 - 2530 / AXOR 1823 - 2544

MAX. - MIN.: 786 - 475

KLÖTZE TECH. NO: KT27915

OEM NO
0053266800
0063262900



REFERENCE NO
SACHS
280940

MONROE
T5363



ACTROS 2627 - 2665

MAX. - MIN.: 783 - 473

KLÖTZE TECH. NO: KT28007

OEM NO
0053268800
0063260300
0063261200
0063261100
3753260500



REFERENCE NO
SACHS
311644 - 311665

MONROE
T5358



ACTROS 1824 - 1863 / ATEGO 1823 - 1929 / AXOR 1823 - 2044

MAX. - MIN.: 705 - 435



**SHOCK
ABSORBER**

**MERCEDES
PARTS**



**KLÖTZE
TECHNIC**

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT27933</p> <p>OEM NO 9703260100</p> <p>REFERENCE NO SACHS 131739</p> <p>MONROE T1273</p> <p> ATEGO 712 - 2530</p>	 <p>MAX. - MIN.: 695 - 420</p>	<p>KLÖTZE TECH. NO: KT27510</p> <p>OEM NO 1233261500 - 0033261400 0043266800 - 0033261500 0043266900 - 0063266300 6173260000 - 6523200031</p> <p>REFERENCE NO SACHS 106757</p> <p>MONROE T5030</p> <p> UNIMOG / MG / NK / LK</p>	 <p>MAX. - MIN.: 713 - 428</p>
<p>KLÖTZE TECH. NO: KT27803</p> <p>OEM NO 0023261100 0023261300 0033268300 3873260000</p> <p>REFERENCE NO SACHS 112026</p> <p>MONROE T1151</p> <p> SK / NG SERIES</p>	 <p>MAX. - MIN.: 825 - 465</p>	<p>KLÖTZE TECH. NO: KT43460</p> <p>OEM NO 0023267100 0023267200 0033269600 3813260200</p> <p>REFERENCE NO SACHS 106948</p> <p>MONROE T5099</p> <p> MK SERIES</p>	 <p>MAX. - MIN.: 713 - 428</p>
<p>KLÖTZE TECH. NO: KT43462</p> <p>OEM NO 0013269600 0023264800 0023264900 0033269500 0043261800 0063265800 3853260200</p> <p>REFERENCE NO SACHS 123834 - 106951</p> <p>MONROE T5074</p> <p> NG/LK/LN2 SERIES</p>	 <p>MAX. - MIN.: 803 - 473</p>	<p>KLÖTZE TECH. NO: KT43461</p> <p>OEM NO 3873260100 0023261200 0023261400</p> <p>REFERENCE NO SACHS 101076</p> <p>MONROE T1010</p> <p> NG SERIES</p>	 <p>MAX. - MIN.: 955 - 535</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT43463

OEM NO
0063265900
0032366200
0032366300
0033268500
0053262000
0033265800
0063265900

REFERANCE NO
SACHS
310793 - 101410

MONROE
T5034



MAX. - MIN.: 666 - 416



SK / NG SERIES

KLÖTZE TECH. NO: KT27655

OEM NO
0023268800
0023268900
0033264400

REFERANCE NO
SACHS
310801 - 101939

MONROE
T1009



MAX. - MIN.: 744 - 454



16-17-18-19-20-24-25 SERIES

KLÖTZE TECH. NO: KT28000

OEM NO
0063232000
0073232100
0033233600

REFERANCE NO
SACHS
123208 - 290235

MONROE



MAX. - MIN.: 710 - 445



UNIMOG 1000-5023

KLÖTZE TECH. NO: KT27847

OEM NO
0053239700 - 0063231600
0063233800 - 0063236500
0063237100 - 0063237200
3753230100 - 9583230700
9583231000

REFERANCE NO
SACHS
125898 - 124358 - 131747 - 131056

MONROE
T1207



MAX. - MIN.: 855 - 503



ACTROS 1824-3550 / ATEGO 1214-2628 / AXOR 1823-4144

KLÖTZE TECH. NO: KT27799

OEM NO
0033264800
0033262500
0033262600
0033266000

REFERANCE NO
SACHS
106746

MONROE
T5225



MAX. - MIN.: 804 - 479



NG SERIES

KLÖTZE TECH. NO: KT43464

OEM NO
0043262300 - 0043262400
0043264300 - 0023265000
0023265500 - 0033267400
9723230100 - 9723230300

REFERANCE NO
SACHS
106887 - 101323 - 131950

MONROE
T1115



MAX. - MIN.: 667 - 416



NG/SK SERIES



**SHOCK
ABSORBER**

www.klotztechnik.de
**MERCEDES
PARTS**

**KLÖTZE
TECHNIC**

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT27866</p> <p>OEM NO 0053264500 6753260000 6753260400 6753260600 0063267800</p> <p>REFERENCE NO SACHS 106759 - 310791</p> <p>MONROE T5129</p> <p> LK/LN2 SERIES</p>	 <p>MAX. - MIN.: 712 - 442</p>	<p>KLÖTZE TECH. NO: KT28082</p> <p>OEM NO 9703230000 9703231000 9703230700 9703230300</p> <p>REFERENCE NO SACHS 125910 - 280929 - 313766</p> <p>MONROE T1255</p> <p> ATEGO 712-1229</p>	 <p>MAX. - MIN.: 690 - 410</p>
<p>KLÖTZE TECH. NO: KT27826</p> <p>OEM NO 0053261400 0063260500 3753260300</p> <p>REFERENCE NO SACHS 124376</p> <p>MONROE T5256</p> <p> ACTROS 1824-4844 / ATEGO 2223-2550 / AXOR 2523-2544</p>	 <p>MAX. - MIN.: 875 - 520</p>	<p>KLÖTZE TECH. NO: KT27867</p> <p>OEM NO 0063239500 - 0033236700 0033236800 - 0043234100 0043236800 - 0043236900 0053236000 - 0053236500</p> <p>REFERENCE NO SACHS 310163 - 106865 - 131431</p> <p>MONROE T1232</p> <p> ACTROS 1824 - 1863</p>	 <p>MAX. - MIN.: 805 - 490</p>
<p>KLÖTZE TECH. NO: KT27863</p> <p>OEM NO 0063268200 9743260000 9743260400 9703260400 9583260100</p> <p>REFERENCE NO SACHS 125912</p> <p>MONROE T5178</p> <p> ATEGO 1214 - 2530</p>	 <p>MAX. - MIN.: 668 - 418</p>	<p>KLÖTZE TECH. NO: KT27943</p> <p>OEM NO 9743230000 9743230600 9753230000 0073230800 9583230400 9743230400 9743231300</p> <p>REFERENCE NO SACHS 125909 - 300018</p> <p>MONROE T1246</p> <p> ATEGO 712 - 1929</p>	 <p>MAX. - MIN.: 736 - 438</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT27845

OEM NO
0063235400
3753230900

REFERENCE NO
SACHS
131622

MONROE
T1304



ACTROS 1824 - 3550 / ATEGO 1823 - 2628 / AXOR 1823 - 2831

MAX. - MIN.: 804 - 479

KLÖTZE TECH. NO: KT28073

OEM NO
9603235500

REFERENCE NO
SACHS

MONROE



AROCS

MAX. - MIN.: 731 - 441

KLÖTZE TECH. NO: KT27847

OEM NO
0053239700
0063232100
0063237200
3753230100

REFERENCE NO
SACHS
125898

MONROE
T1207



ACTROS 1824 - 4844 / ATEGO 1823 - 2628 / AXOR 1823 - 4144

MAX. - MIN.: 853 - 503

KLÖTZE TECH. NO: KT27966

OEM NO
0063238200
0063239700
0063233400
0053239900
0063238300

REFERENCE NO
SACHS
310769 - 310807 - 124375

MONROE
T5361 - T5360



ACTROS 1824-2665 / ATEGO 1823-2530 / AXOR 1823-2544

MAX. - MIN.: 732 - 447

KLÖTZE TECH. NO: KT27831

OEM NO
0053239500 - 0063233700
0063236100 - 0013231100
0023231000 - 0023231100
0023231600 - 0023235400
0033231000

REFERENCE NO
SACHS
301805 - 124314 - 112028 - 310777
- 106872

MONROE
T1204 - T1220



ACTROS 1824-4844 / ATEGO 1823-2530 / AXOR 1823-2831

MAX. - MIN.: 803 - 479

KLÖTZE TECH. NO: KT27798

OEM NO
0043234500 - 0023235800
0023235900 - 0023269500
0033260200 - 0033267700
0043230000 - 0023233200
0023237200

REFERENCE NO
SACHS
310798 - 106869 - 106608 - 310772
- 106952

MONROE
T1016



14-16-17-19-20-26-28-33-35-40-48-50-52 SERIES

MAX. - MIN.: 809 - 489








SHOCK ABSORBER

MERCEDES
PARTS



KLÖTZE
TECHNIC

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT27799</p> <p>OEM NO 0053234000 - 0053234100 0033233200 - 0033233300 0043239200 - 0063230900</p> <p>REFERENCE NO SACHS 310802 - 112366 - 310789 - 101808</p> <p>MONROE T1012 -T1011</p>  <p>18-19-20-22-24-25-26-30-32-33-35 SERIES</p>	 <p>MAX. - MIN.: 792 - 486</p>	<p>KLÖTZE TECH. NO: KT227917</p> <p>OEM NO 9463260500</p> <p>REFERENCE NO SACHS 310134</p> <p>MONROE F5195</p>  <p>TZ4/8C6-9 -TZ5/8C7-9 -TE5/8C7-9 -TE4/8C6-9</p>	 <p>MAX. - MIN.: 395 - 285</p>
<p>KLÖTZE TECH. NO: KT27058</p> <p>OEM NO 0023265100 0023264500</p> <p>REFERENCE NO SACHS 101324</p> <p>MONROE</p>  <p>NG SERIES</p>	 <p>MAX. - MIN.: 708 - 428</p>	<p>KLÖTZE TECH. NO: KT27938</p> <p>OEM NO 0033265100 0023260200 0012364100</p> <p>REFERENCE NO SACHS 106592</p> <p>MONROE T5081</p>  <p>NG/SK SERIES</p>	 <p>MAX. - MIN.: 665 - 415</p>
<p>KLÖTZE TECH. NO: KT43465</p> <p>OEM NO 0033262100 0033262200 0033264200 0043264700 6203260000 6453200031 6453260000</p> <p>REFERENCE NO SACHS 106220</p> <p>MONROE T1195</p>  <p>NG/SK SERIES</p>	 <p>MAX. - MIN.: 825 - 465</p>	<p>KLÖTZE TECH. NO: KT43466</p> <p>OEM NO 0033263000 0033262900</p> <p>REFERENCE NO SACHS 106742</p> <p>MONROE T5130</p>  <p>MK SERIES</p>	 <p>MAX. - MIN.: 685 - 430</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT43467
OEM NO
 0033263800
 0033263900
 0043260200

REFERENCE NO
SACHS
 106875

MONROE

LK/LN/MK/NG SERIES
MAX. - MIN.: 660 - 410
KLÖTZE TECH. NO:
KT43468
OEM NO
 0013264600
 0023261000
 0033269900
 3453267500

REFERENCE NO
SACHS
 605002 - 106950

MONROE
 T5090

LK/LN2/LP SERIES
MAX. - MIN.: 900 - 540
KLÖTZE TECH. NO:
KT43469
OEM NO
 0013263200 - 0013266500
 0013267400 - 0013267500
 0013268500 - 0033269800
 3453267770

REFERENCE NO
SACHS
 606103 - 106949

MONROE
 T5039

LP/NG SERIES
MAX. - MIN.: 790 - 478
KLÖTZE TECH. NO:
KT27846
OEM NO
 0063237300 - 0033232000
 0033232100 - 0043235600
 0053239600 - 0073231400
 3753230600 - 9583230800
 9583230900

REFERENCE NO
SACHS
 124678 - 131185

MONROE
 T1220

MERCEDES AXOR FR (6x4,8x4)
MAX. - MIN.: 804 - 479
KLÖTZE TECH. NO:
KT28008
OEM NO
 0063261000
 0053269800
 0053266900

REFERENCE NO
SACHS
 311668

MONROE
 T5453

MERCEDES ACTROS RR
MAX. - MIN.: 684 - 424
KLÖTZE TECH. NO:
KT27829
OEM NO
 0053263300
 0053263400

REFERENCE NO
SACHS
 125908

MONROE
 T1200

ACTROS
MAX. - MIN.: 765 - 465



**SHOCK
ABSORBER**

**MERCEDES
PARTS**



**KLÖTZE
TECHNIC**

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43470</p> <p>OEM NO 3753200330 9603200430 10041308</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p> <p> AXOR 4 DINGL</p>	 <p>MAX. - MIN.: 470 - 315</p>	<p>KLÖTZE TECH. NO: KT34853</p> <p>OEM NO 3758900519 - 9408903919 9408904119 - 9583172103 3758900419 - 3758900919 9583171003 - 9583171103</p> <p>REFERENCE NO SACHS 290995</p> <p>MONROE CB0097</p> <p> ACTROS 1824-4844 / ATEGO 1823-2530 / AXOR 1823-4144</p>	 <p>MAX. - MIN.: 371 - 303</p>
<p>KLÖTZE TECH. NO: KT34864</p> <p>OEM NO 9428902819 9428902219</p> <p>REFERENCE NO SACHS 131850</p> <p>MONROE CB0100</p> <p> ACTROS 1824-1861</p>	 <p>MAX. - MIN.: 340 - 241</p>	<p>KLÖTZE TECH. NO: KT34871</p> <p>OEM NO 3758900819 9408904519 9408904619 9583171503</p> <p>REFERENCE NO SACHS 290996</p> <p>MONROE CB0163</p> <p> AXOR 1823 - 4144 / ATEGO 1823 - 2628</p>	 <p>MAX. - MIN.: 350 - 246</p>
<p>KLÖTZE TECH. NO: KT28027</p> <p>OEM NO 9408903119</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p> <p> ACTROS 1824-1861</p>	 <p>MAX. - MIN.: 341 - 238</p>	<p>KLÖTZE TECH. NO: KT34866</p> <p>OEM NO 9438900119 - 9428905519 9428905619 - 9438900219 9428905119 - 9428905019 9428904919 - 3758900819 9408904519 - 9408904619 9583171503</p> <p>REFERENCE NO SACHS 313946 - 290248 - 290249 313947 - 290259</p> <p>MONROE CB0121</p> <p> ACTROS 1824-1861</p>	 <p>MAX. - MIN.: 345 - 246</p>



KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT34851

OEM NO

3758901119 - 3758900419
3758900919 - 9408903819
9408904719 - 9583171003
9583171103 - 9583170003
3753170003

REFERENCE NO

SACHS

313949 - 290251

MONROE

CB0150



MAX. - MIN.: 331 - 246



AXOR 1823 - 4144 / ATEGO 1823 - 2628

KLÖTZE TECH. NO:

KT34809

OEM NO

0008912205
0008911805
0008911905


REFERENCE NO

SACHS

101378 - 101456 - 313424

MONROE

CB0071



MAX. - MIN.: 259 - 192



SK / NG SERIES

KLÖTZE TECH. NO:

KT34850

OEM NO

9428904019 - 9428901619
9428901719 - 9428903619
9438901019 - 9438901119
9438901619 - 9438901719

REFERENCE NO

SACHS

290247 - 313945 - 131851

MONROE

CB0158



MAX. - MIN.: 315 - 242



ACTROS 1824 / 4844

KLÖTZE TECH. NO:

KT34852

OEM NO

9428904719

REFERENCE NO

SACHS

131275

MONROE

CB0096



MAX. - MIN.: 371 - 303



ACTROS 1824-1861

KLÖTZE TECH. NO:

KT43471

OEM NO

3758900119
9408901719

REFERENCE NO

SACHS

MONROE



MAX. - MIN.: 278 - 220



AXOR 3028

KLÖTZE TECH. NO:

KT34966

OEM NO

9408900919
9408900819
9408901319
9408901519
9523170403

REFERENCE NO

SACHS

135066

MONROE



MAX. - MIN.: 297 - 212



AXOR 3340



SHOCK ABSORBER

MERCEDES
PARTS



MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT34915</p> <p>OEM NO 9438905019</p> <p>REFERENCE NO SACHS 312649</p> <p>MONROE CB0164</p>  <p>ACTROS 1824 - 3550</p>	 <p>MAX. - MIN.: 229 - 211</p>	<p>KLÖTZE TECH. NO: KT43472</p> <p>OEM NO 9703170103 9703173003 9703173103 9703173203 9703175003</p> <p>REFERENCE NO SACHS 135180</p> <p>MONROE</p>  <p>ATEGO 712-2530</p>	 <p>MAX. - MIN.: 325 - 286</p>
<p>KLÖTZE TECH. NO: KT34863</p> <p>OEM NO 9438901219 9428900419 9428901519 9438902419 9428903819</p> <p>REFERENCE NO SACHS 290245 - 313942</p> <p>MONROE CB0147</p>  <p>ACTROS 1824-4844</p>	 <p>MAX. - MIN.: 369 - 330</p>	<p>KLÖTZE TECH. NO: KT34810</p> <p>OEM NO 3818900719 3818900919 3878901019 3878901319 3878901619</p> <p>REFERENCE NO SACHS 101329</p> <p>MONROE CB0104</p>  <p>NG SERIES</p>	 <p>MAX. - MIN.: 290 - 250</p>
<p>KLÖTZE TECH. NO: KT34866</p> <p>OEM NO 9428905419 9438900319</p> <p>REFERENCE NO SACHS 313948 - 290250</p> <p>MONROE CB0122</p>  <p>ACTROS 1824 - 4844</p>	 <p>MAX. - MIN.: 346 - 251</p>	<p>KLÖTZE TECH. NO: KT34859</p> <p>OEM NO 9438900919 9428902319 9428903119 9438900819 9438901419 9438901519</p> <p>REFERENCE NO SACHS 313763 - 105423</p> <p>MONROE CB0101</p>  <p>ACTROS 1824 / 4844</p>	 <p>MAX. - MIN.: 320 - 250</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT34912
OEM NO
 9438902919
 9438903019

REFERENCE NO
SACHS
 313952

MONROE
 CB0161

MAX. - MIN.: 322 - 284

ACTROS 1824-3550
KLÖTZE TECH. NO:
KT43473
OEM NO
 0008910205
 0008910305
 0008900505
 0008911005
 0013231900
 0008910805
 0008911005

REFERENCE NO
SACHS
 195422

MONROE
 CB0057

MAX. - MIN.: 389 - 251

NG SERIES
KLÖTZE TECH. NO:
KT34951
OEM NO
 9583170503
 9703171703
 9703174103

REFERENCE NO
SACHS
 131676

MONROE

MAX. - MIN.: 301 - 275

ATEGO 712-2530
KLÖTZE TECH. NO:
KT43474
OEM NO
 9583170303
 9703173903
 9703172903

REFERENCE NO
SACHS
 311888

MONROE

MAX. - MIN.: -

MB ATEGO 1315/1418/1518/1718/1725/1728
KLÖTZE TECH. NO:
KT34901
OEM NO
 9438903519
 9438903419

REFERENCE NO
SACHS
 312648 - 313955 - 316700

MONROE
 CB0155

MAX. - MIN.: 330 - 288

ACTROS 1824 - 3550
KLÖTZE TECH. NO:
KT34950
OEM NO
 9583170603
 9703174203
 9703171803

REFERENCE NO
SACHS
MONROE

MAX. - MIN.: -

MB ATEGO 1315/1418/1518/1718/1725/1728




SHOCK ABSORBER

MERCEDES
PARTS



KLÖTZE TECHNIC

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43475</p> <p>OEM NO 9438903219 9438903119</p> <p>REFERENCE NO SACHS 312647 - 313954 - 316699</p> <p>MONROE CB0156</p>  <p>ACTROS 1824 - 3550</p>	 <p>MAX. - MIN.: 330 - 282</p>	<p>KLÖTZE TECH. NO: KT34821</p> <p>OEM NO 6208900219</p> <p>REFERENCE NO SACHS 125178</p> <p>MONROE</p>  <p>1824 - 4844</p>	 <p>MAX. - MIN.: -</p>
<p>KLÖTZE TECH. NO: KT34900</p> <p>OEM NO 9428901119 9428903519 9438900519 9438902319</p> <p>REFERENCE NO SACHS 290246 - 313943 - 316687</p> <p>MONROE CB0165</p>  <p>ACTROS 1824 - 4844</p>	 <p>MAX. - MIN.: 368 -</p>	<p>KLÖTZE TECH. NO: KT34917</p> <p>OEM NO 9438904619 9438904919</p> <p>REFERENCE NO SACHS 312651 - 313957 - 316702</p> <p>MONROE CB0218</p>  <p>ACTROS 1824 - 4844</p>	 <p>MAX. - MIN.: 303 -</p>
<p>KLÖTZE TECH. NO: KT34549</p> <p>OEM NO 3753170003 9583170003</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p>  <p>AXOR 3340 - 4140</p>	 <p>MAX. - MIN.: 233 - 187</p>	<p>KLÖTZE TECH. NO: KT43476</p> <p>OEM NO 3758900719 9408901119</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p>  <p>AXOR 4140</p>	 <p>MAX. - MIN.: 278 - 220</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT34913

OEM NO
 9438903319
 9438903419

REFERENCE NO
SACHS
 312646 - 313953 - 316698

MONROE
 CB0157 - CB0155



MAX. - MIN.: 323 - 281



ACTROS 1824 - 3550

KLÖTZE TECH. NO: KT34863

OEM NO
 9428903919
 9438901319

REFERENCE NO
SACHS
 290257 - 313944

MONROE
 CB0144



MAX. - MIN.: 369 - 330



ACTROS 1824 - 4844

KLÖTZE TECH. NO: KT34957

OEM NO
 9438904419

REFERENCE NO
SACHS
 312650 - 313956 - 316703

MONROE
 CB0217



MAX. - MIN.: -



ACTROS 1824 - 3550

KLÖTZE TECH. NO: KT34857

OEM NO
 9428900519
 9583170703
 3758900019

REFERENCE NO
SACHS
 313941 - 290268

MONROE
 CB0148



MAX. - MIN.: 211 - 166



ACTROS 1824-4844 / ATEGO 1823-2530 / AXOR 1823-4144

KLÖTZE TECH. NO: KT35027

OEM NO
 9603109255
 9603106955
 9613101255

REFERENCE NO
SACHS
 317516

MONROE
 CB0259



MAX. - MIN.: -



AROCS - ANTOS

KLÖTZE TECH. NO: KT28023

OEM NO
 9603107555
 9603100755
 9613101555

REFERENCE NO
SACHS
 316704

MONROE
 CB0251



MAX. - MIN.: 360 - 281



ACTROS MP4 - AROCS - ANTOS



SHOCK ABSORBER

MERCEDES
PARTS



KLÖTZE
TECHNIC

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT34860</p> <p>OEM NO 9428900119 9428906919 9428902919</p> <p>REFERENCE NO SACHS 105392 - 313676 731700002549- 73170000255</p> <p>MONROE CB0107 - CB0089</p>  <p>ACTROS 1831 - 1835 - 1840 - 1843 - 1848 - 1853</p>	 <p>MAX. - MIN.: 346 - 275</p>	<p>KLÖTZE TECH. NO: KT34861</p> <p>OEM NO 9428900219 9428906019 A9428900219H87:H88 9438903919</p> <p>REFERENCE NO SACHS 105409 - 290997 - 311189</p> <p>MONROE CB0090</p>  <p>ACTROS 1831 - 4148</p>	 <p>MAX. - MIN.: 315 - 240</p>
<p>KLÖTZE TECH. NO: KT34862</p> <p>OEM NO 9428905319 9428905919 9438903819 6628900119</p> <p>REFERENCE NO SACHS 311663 - 105414 - 290998</p> <p>MONROE CB0115</p>  <p>ACTROS MP2 - ACTROS</p>	 <p>MAX. - MIN.: 355 - 250</p>	<p>KLÖTZE TECH. NO: KT34902</p> <p>OEM NO 9428906119</p> <p>REFERENCE NO SACHS 311664 - 73170001830 731700000920 - 731700000691</p> <p>MONROE CB0116</p>  <p>ACTROS - AXOR (18.31-18.40-18.60-19.35)</p>	 <p>MAX. - MIN.: 320 - 245</p>
<p>KLÖTZE TECH. NO: KT34869</p> <p>OEM NO 9428905219 9428907019</p> <p>REFERENCE NO SACHS 105408</p> <p>MONROE CB0108</p>  <p>ACTROS 1831 - 1860</p>	 <p>MAX. - MIN.: 350 - 250</p>	<p>KLÖTZE TECH. NO: KT34916</p> <p>OEM NO 9408904919</p> <p>REFERENCE NO SACHS 315153</p> <p>MONROE CB0236</p>  <p>MERCEDES AXOR FR</p>	 <p>MAX. - MIN.: 345 - 245</p>



KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT27057

OEM NO
3643207031
3026260000
0013262000
0023262000

REFERENCE NO
SACHS
101161

MONROE



MAX. - MIN.: 773 - 460



O 302

KLÖTZE TECH. NO:

KT43477

OEM NO
53263500

REFERENCE NO
SACHS
101467

MONROE
B5347



MAX. - MIN.: 605 - 360



O 404

KLÖTZE TECH. NO:

KT27889

OEM NO
0023262300 - 3023260300
0013260800 - 0013262800
0023238000 - 0023262500
0033237400 - 0023264100
0013262200

REFERENCE NO
SACHS
106893 - 101236 - 101164 - 101163
- 106161

MONROE
B1327 - B1263



MAX. - MIN.: 604 - 359



O303 - O304

KLÖTZE TECH. NO:

KT43478

OEM NO
0023234200 - 0033263600
0053231400 - 3733200230
0043235800 - 0063237500
3573260100 - 3963200030
0023236500

REFERENCE NO
SACHS
106795 - 101158 - 112422 - 106646
- 310792

MONROE
B1259



MAX. - MIN.: 604 - 359



O303 - O304

KLÖTZE TECH. NO:

KT27918

OEM NO
3563230200
3563230400
3563230500

REFERENCE NO
SACHS

MONROE



MAX. - MIN.: 664 - 435



MERCEDES O403/404 FR

KLÖTZE TECH. NO:

KT27285

OEM NO
3563200031
3563260000
3563260700
6133260100

REFERENCE NO
SACHS

MONROE



MAX. - MIN.: 613 - 373



MERCEDES O350 RR



**SHOCK
ABSORBER**

**MERCEDES
PARTS**



**KLÖTZE
TECHNIC**

MERCEDES

Model / Details	Description	Replaces Ref. No:	KT No.
-----------------	-------------	-------------------	--------

KLÖTZE TECH. NO: KT27891

OEM NO
6293260100
6293260000

REFERANCE NO
SACHS


MONROE



MERCEDES TRAVEGO RR



MAX. - MIN.: 617 - 379

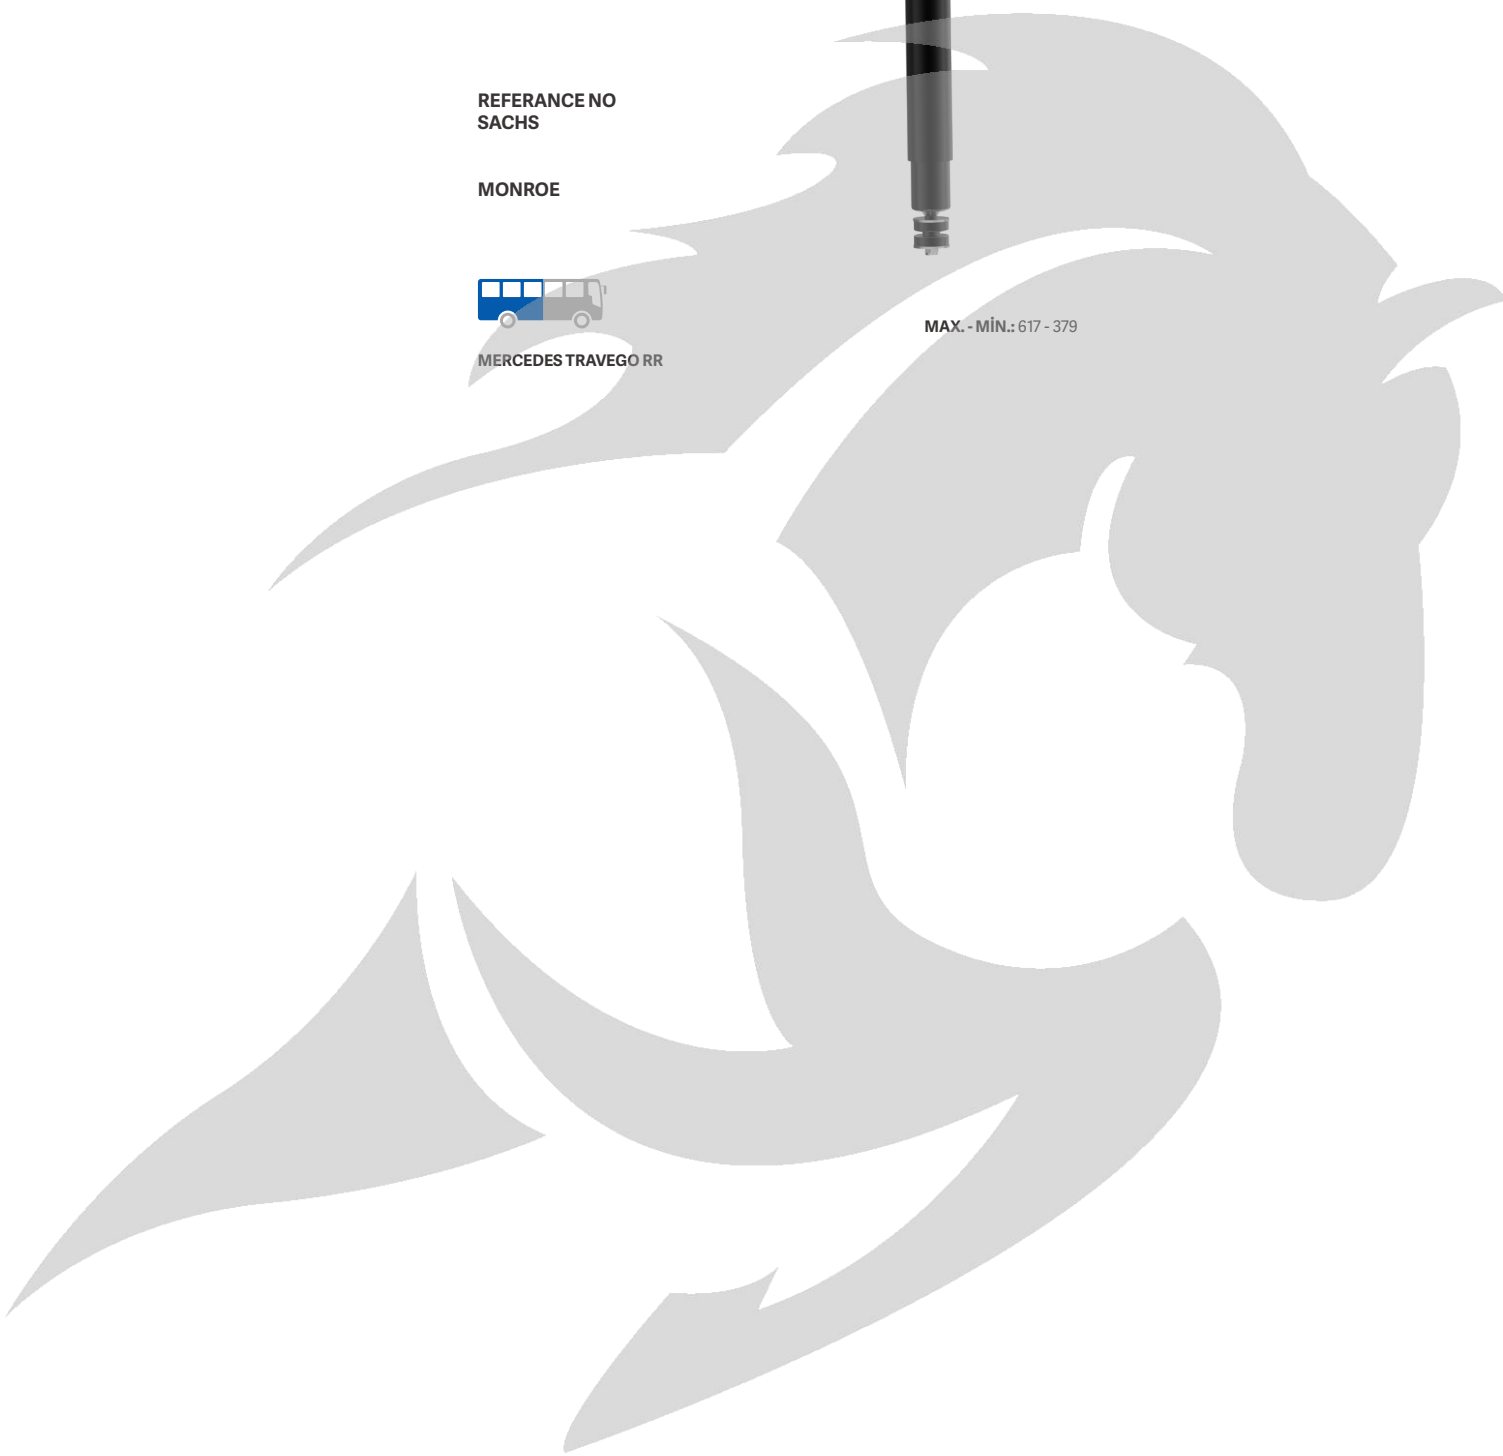

SHOCK ABSORBER



www.klotzetechnik.de

MAN SHOCK ABSORBER





KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT27367

OEM NO
 81437026011
 81437026076
 81437026012



REFERENCE NO
SACHS
 311480 -311894

MONROE
 T1321



TGA - TGS - TGX

MAX. - MIN.: 699 - 429

KLÖTZE TECH. NO: KT27499

OEM NO
 81437016564
 81437016584
 81437016620
 81437016585



REFERENCE NO
SACHS
 112853

MONROE
 T5044



F2000 - F90

MAX. - MIN.: 651 - 419

KLÖTZE TECH. NO: KT27258

OEM NO
 81437016905
 81437026100
 0083654



REFERENCE NO
SACHS
 131696 -315151

MONROE
 T5263



TGA - TGS - TGX

MAX. - MIN.: 678 - 428

KLÖTZE TECH. NO: KT29904

OEM NO
 81437016904
 81437026099



REFERENCE NO
SACHS
 280928

MONROE
 T5261



TGA - TGS - TGX

MAX. - MIN.: 772 - 473

KLÖTZE TECH. NO: KT29961

OEM NO
 81437016908
 81437026037



REFERENCE NO
SACHS
 310626

MONROE
 T5275



TGA - TGS - TGX

MAX. - MIN.: 768 - 473

KLÖTZE TECH. NO: KT29872

OEM NO
 81437026119
 81437016911
 81437026118
 81437016912



REFERENCE NO
SACHS
 310627 -280931

MONROE
 T5276



TGA - TGS - TGX

MAX. - MIN.: 893 - 533

















**SHOCK
ABSORBER**

**MAN
PARTS**



MAN

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43479</p> <p>OEM NO 81437016568 81437016605</p> <p>REFERENCE NO SACHS 112854</p> <p>MONROE T5047</p>  <p>F90 - M90 - TGA</p>	 <p>MAX. - MIN.: 752 - 462</p>	<p>KLÖTZE TECH. NO: KT43480</p> <p>OEM NO 81437016934 81437026148 81437026016</p> <p>REFERENCE NO SACHS 300001</p> <p>MONROE T5350</p>  <p>F2000 - TGA - TGS - TGX</p>	 <p>MAX. - MIN.: 740 - 455</p>
<p>KLÖTZE TECH. NO: KT29905</p> <p>OEM NO 81437016926</p> <p>REFERENCE NO SACHS 280938</p> <p>MONROE T5277</p>  <p>TGA - TGS - TGX</p>	 <p>MAX. - MIN.: 668 - 418</p>	<p>KLÖTZE TECH. NO: KT27393</p> <p>OEM NO 81437026079</p> <p>REFERENCE NO SACHS 314936</p> <p>MONROE T1349</p>  <p>F2000 - TGS - TGX</p>	 <p>MAX. - MIN.: 870 - 538</p>
<p>KLÖTZE TECH. NO: KT29879</p> <p>OEM NO 81437016750 81437016766 81437016751</p> <p>REFERENCE NO SACHS 112929</p> <p>MONROE T1037 -T1185 -</p>  <p>F90 - L2000</p>	 <p>MAX. - MIN.: 645 - 385</p>	<p>KLÖTZE TECH. NO: KT29834</p> <p>OEM NO 81437026005 81437026014 81437026078 81437026086 81437026004</p> <p>REFERENCE NO SACHS 311479</p> <p>MONROE T1308</p>  <p>TGA-TGS- TGX-</p>	 <p>MAX. - MIN.: 870 - 540</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT27059
OEM NO

 81437016782
 81437016820
 81437016253
 81437016338
 81437016452
 81437016932

REFERANCE NO
SACHS

124610-106469

MONROE

T1184


G90-TGM
MAX. - MIN.: 658 - 403

KLÖTZE TECH. NO:
KT29825
OEM NO

 81437016902
 81437016964

REFERANCE NO
SACHS

131750-280930

MONROE

T1266


TGA
MAX. - MIN.: 675 - 405

KLÖTZE TECH. NO:
KT29874
OEM NO

 81437016490
 81437016491
 81437016456
 81437016444
 81437016442

REFERANCE NO
SACHS

112869

MONROE

T1028


F90
MAX. - MIN.: 676 - 398

KLÖTZE TECH. NO:
KT29833
OEM NO

 81437026003
 81437026002
 81437026077
 81437026085

REFERANCE NO
SACHS

312859 -311478

MONROE

T1320


TGA - TGS - TGX
MAX. - MIN.: 715 - 434

KLÖTZE TECH. NO:
KT29836
OEM NO

81437026058


REFERANCE NO
SACHS

314336

MONROE

T1333


TGA - TGS - TGX
MAX. - MIN.: 665 - 429

KLÖTZE TECH. NO:
KT29449
OEM NO

 81437016418
 81437016679
 81437016734
 81437016405
 81437016677

REFERANCE NO
SACHS

106284

MONROE

T1333


16-19-22 SERIES
MAX. - MIN.: 772 - 472













**SHOCK
ABSORBER**

**MAN
PARTS**

**KLÖTZE
TECHNIC**

MAN

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT30017</p> <p>OEM NO 81437016983 81437016990 81437016992 81437026015 81437026080 81437026084</p> <p>REFERENCE NO SACHS 311488 -315287</p> <p>MONROE T1347</p>  <p>TGS</p>  <p>MAX. - MIN.: 770 - 460</p>	<p>KLÖTZE TECH. NO: KT29880</p> <p>OEM NO 81437016178 - 81437016364 81437016405 - 81437016178 81437016579 - 81437016418 81437016364 - 81437016679 81437016417</p> <p>REFERENCE NO SACHS 101383</p> <p>MONROE T5037</p>  <p>16-19-20-22-24-25-26 SERIES</p>  <p>MAX. - MIN.: 772 - 472</p>		
<p>KLÖTZE TECH. NO: KT30222</p> <p>OEM NO 81437016149 - 81437016174 81437016195 - 81437016206 81437016218 - 81437016220 81437016244 - 81437016528 81437016287</p> <p>REFERENCE NO SACHS 101345 -101778 -101122</p> <p>MONROE T5069</p>  <p>SL - SR - SÜ SERIES</p>  <p>MAX. - MIN.: 552 - 342</p>	<p>KLÖTZE TECH. NO: KT29773</p> <p>OEM NO 81437016597 81437016598 81437016600 81437016612 81437016632 81437016633</p> <p>REFERENCE NO SACHS 112859</p> <p>MONROE T1093</p>  <p>F2000 - F90 - M2000 - M90</p>  <p>MAX. - MIN.: 697 - 407</p>		
<p>KLÖTZE TECH. NO: KT30164</p> <p>OEM NO 81437016888 81437016794</p> <p>REFERENCE NO SACHS 131256 -125857</p> <p>MONROE T1190</p>  <p>F2000</p>  <p>MAX. - MIN.: 682 - 417</p>	<p>KLÖTZE TECH. NO: KT27540</p> <p>OEM NO 81437016793 81437016804</p> <p>REFERENCE NO SACHS 125148 -125963</p> <p>MONROE T1189</p>  <p>F2000</p>  <p>MAX. - MIN.: 647 - 385</p>		



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT29863
OEM NO

81437016781 - 81437016789
 81437016821 - 81437016864
 81437016349 - 81437016365
 81437016392 - 81437016410
 81437016665

REFERANCE NO
SACHS

125512 -106096 -106145 -101993

MONROE

T1142



MAX. - MIN.: 617 - 358



L2000 - M2000 - G90

KLÖTZE TECH. NO: KT29030
OEM NO

81437016492
 81437016493
 81437016616
 81437016619
 81437016707

REFERANCE NO
SACHS

112325 -112881

MONROE

T1090



MAX. - MIN.: 683 - 393



F90

KLÖTZE TECH. NO: KT43481
OEM NO

81437016346 - 81437016258
 81437016345 - 81437016186
 81437016134 - 81437016132
 81437016130 - 81437016128
 81437016097

REFERANCE NO
SACHS

101985

MONROE

T5056



MAX. - MIN.: 703 - 433



M90

KLÖTZE TECH. NO: KT43482
OEM NO

81437016177 -81437016406
 81437016142 -81437016138
 81437016419 -81437016680
 81437016679 -81437016580
 81437016658

REFERANCE NO
SACHS

101382 -106289 -101706
 106285 -131062

MONROE

T5049 - T5036 - T5135



MAX. - MIN.: 672 - 422



16-19-20-22-24-25-26 SERIES

KLÖTZE TECH. NO: KT29972
OEM NO

81437026000

REFERANCE NO
SACHS

311895

MONROE

T1313



MAX. - MIN.: 595 - 380



TGL

KLÖTZE TECH. NO: KT43483
OEM NO

81437026071

REFERANCE NO
SACHS

315006

MONROE

T5432



MAX. - MIN.: 809 - 498



TGA - TGS



**SHOCK
ABSORBER**

**MAN
PARTS**



MAN

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43484</p> <p>OEM NO 81437026117 81437016950</p> <p>REFERENCE NO SACHS 310629</p> <p>MONROE T5262</p> <p> TGA -TGS -TGX</p>	 <p>MAX. - MIN.: 572 - 373</p>	<p>KLÖTZE TECH. NO: KT43485</p> <p>OEM NO 81437026059</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p> <p> TGA</p>	 <p>MAX. - MIN.: -</p>
<p>KLÖTZE TECH. NO: KT34642</p> <p>OEM NO 81417226061</p> <p>REFERENCE NO SACHS 312836</p> <p>MONROE CB0197</p> <p> TGA - TGS</p>	 <p>MAX. - MIN.: 345 - 287</p>	<p>KLÖTZE TECH. NO: KT27514</p> <p>OEM NO 81417226031 81417226044 81417226047</p> <p>REFERENCE NO SACHS 105843</p> <p>MONROE</p> <p> F2000</p>	 <p>MAX. - MIN.: 312 - 226</p>
<p>KLÖTZE TECH. NO: KT27086</p> <p>OEM NO 81417226014 - 81417226016 81417226050 - 81417226038 81417226042 - 81417226009 81417226012 - 81417226033 81417226037</p> <p>REFERENCE NO SACHS 112211 -112884 -112855</p> <p>MONROE CB0106</p> <p> F2000 - F90</p>	 <p>MAX. - MIN.: 314 - 252</p>	<p>KLÖTZE TECH. NO: KT34640</p> <p>OEM NO 81417226032 -81417226046</p> <p>REFERENCE NO SACHS 105844</p> <p>MONROE</p> <p> F2000 - STEYR</p>	 <p>MAX. - MIN.: 296 - 223</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT34644
OEM NO
 85417226010
 85417226017

REFERENCE NO
SACHS
 290977 -290975

MONROE
 CB0199

F2000 - TGA - TGS - STEYR

MAX. - MIN.: 379 - 282

KLÖTZE TECH. NO:
KT34648
OEM NO
 81417226068

REFERENCE NO
SACHS
 316729

MONROE
 CB0200

TGA

MAX. - MIN.: -

KLÖTZE TECH. NO:
KT34649
OEM NO
 81417226059
 85417226019
 85417226011

REFERENCE NO
SACHS
 290978 -290976

MONROE
 CB0198

TGA - TGS - STEYR

MAX. - MIN.: 345 - 244

KLÖTZE TECH. NO:
KT27520
OEM NO
 81417226015 - 81417226010
 81417226013 - 81417226017
 81417226045 - 134641650
 4426628

REFERENCE NO
SACHS
 112212 -112856 -112885

MONROE
 CB0105

F2000 - F90

MAX. - MIN.: 292 - 246

KLÖTZE TECH. NO:
KT34641
OEM NO
 81417226060

REFERENCE NO
SACHS
 312835

MONROE
 CB0201

TGA - TGS

MAX. - MIN.: 379 - 318

KLÖTZE TECH. NO:
KT34652
OEM NO
 81417226085
 81417226086
 81417226087

REFERENCE NO
SACHS
 317926 - 290975 - 290977
 312835 - 316729

MONROE

TGA - TGS - F2000

MAX. - MIN.: 382 - 322



**SHOCK
ABSORBER**

**MAN
PARTS**



MAN

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT27524</p> <p>OEM NO 85417226008 85417226022 85417226014 81417226077</p> <p>REFERENCE NO SACHS 135194 -135196 -313181</p> <p>MONROE</p> <p> TGA & STEYR</p>	 <p>MAX. - MIN.: 380 - 285</p>	<p>KLÖTZE TECH. NO: KT34637</p> <p>OEM NO 85417226007 81417226076 85417226013 81417226058 85417226024</p> <p>REFERENCE NO SACHS 135199 -135200 -313184</p> <p>MONROE</p> <p> TGA - TGM - TGL - TGS - TGX</p>	 <p>MAX. - MIN.: 339 - 242</p>
<p>KLÖTZE TECH. NO: KT34638</p> <p>OEM NO 81417226053 - 81417226069 81417226070 - 81417226071 81417226072 - 81417226054 81417226066 - 81417226067 81417226082</p> <p>REFERENCE NO SACHS 300013 -313077 -300014 -235003 731700001686 - 731700003505</p> <p>MONROE</p> <p> TGA - TGS - TGX</p>	 <p>MAX. - MIN.: 373 - 280</p>	<p>KLÖTZE TECH. NO: KT34637</p> <p>OEM NO 81417226076 81417226058 85417226024 85417226013 85417226007</p> <p>REFERENCE NO SACHS 135200 - 313184</p> <p>MONROE</p> <p> TGA - TGM - TGL - TGS - TGX</p>	 <p>MAX. - MIN.: 339 - 242</p>
<p>KLÖTZE TECH. NO: KT34635</p> <p>OEM NO 81417226048 81417226051</p> <p>REFERENCE NO SACHS 105855</p> <p>MONROE CB0092</p> <p> FH - 2000</p>	 <p>MAX. - MIN.: 315 - 223</p>	<p>KLÖTZE TECH. NO: KT27523</p> <p>OEM NO 81417226049 81417226052 81417226028</p> <p>REFERENCE NO SACHS 105856</p> <p>MONROE CB0091</p> <p> FH - 2000 - STEYR</p>	 <p>MAX. - MIN.: 290 - 240</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT34633
OEM NO

 81417226057
 81417226075
 85417226006
 85417226012
 81417226055
 81417226073

REFERENCE NO
SACHS

 135198 - 313198 - 135176 - 30001
 313078 - 300015 - 313183 -
 731700235005 - 731700004110 -
 72100105388

TGA DX RIGHT & STEYR
MAX. - MIN.: 340 - 240

KLÖTZE TECH. NO:
KT27524
OEM NO

 85417226009
 85417226015
 85417226023
 81417226078
 81417226024
 81417226092

REFERENCE NO
SACHS

135197 - 135195 - 313182

MONROE

CB0112


TGA & STEYR
MAX. - MIN.: 377 - 279

KLÖTZE TECH. NO:
KT34634
OEM NO

 81417226074
 81417226056
 81417226083

REFERENCE NO
SACHS

313080 - 300017

MONROE

TGA - TGM - TGL - TGS - TGX
MAX. - MIN.: 340 - 245

KLÖTZE TECH. NO:
KT43486
OEM NO

 81437016230
 81437016409
 81437016393
 81437016321
 81437016316
 81437016166
 81437016162

REFERENCE NO
SACHS

106148

MONROE

SG/SL/SL II/SR SERIES
MAX. - MIN.: 526 - 325

KLÖTZE TECH. NO:
KT43487
OEM NO

 81437016578
 81437016450
 81437016573

REFERENCE NO
SACHS

106885

MONROE

B5260


R/S/SG/SL/SR/SÜ SERIES
MAX. - MIN.: 689 - 389

KLÖTZE TECH. NO:
KT43488
OEM NO

 81437016266 - 81437016318
 81437016324 - 81437016325
 81437016539 - 81437016538
 81437016542 - 81437016543
 81437016606

REFERENCE NO
SACHS

 101892 - 131058 - 112879
 106010 - 106884

MONROE

B5259


R/S/SG/SL/SR/SÜ SERIES
MAX. - MIN.: 526 - 325



**SHOCK
ABSORBER**

**MAN
PARTS**



MAN

Model / Details *Description* *Replaces Ref. No:* *KT No.*

KLÖTZE TECH. NO: KT30222

OEM NO
81437016330
81437016334

**REFERENCE NO
SACHS**
106009

MONROE



S/SG/SL/SU SERIES



MAX. - MIN.: -

KLÖTZE TECH. NO: KT43489

OEM NO
81437016163 - 81437016167
81437016217 - 81437016219
81437016232 - 81437016234
81437016319 - 81437016320
81437016323

**REFERENCE NO
SACHS**
101894 - 101893 - 106002

MONROE



SR/SÜ SERIES



MAX. - MIN.: 599 - 368

KLÖTZE TECH. NO: KT30053

OEM NO
81437016706 - 81437016730
81437016768 - 81437016801
81437016806 - 81437016811
81437016832 - 81437016861
81437016893

**REFERENCE NO
SACHS**

MONROE
B1278



LION S STAR COACH RR



MAX. - MIN.: 488 - 309

KLÖTZE TECH. NO: KT29856

OEM NO
81437016785 - 81437016855
81437016856 - 81437016923
81437016940 - 81437026008

**REFERENCE NO
SACHS**

MONROE



LION S STAR COACH RR



MAX. - MIN.: 504 - 309

SHOCK ABSORBER



www.klotzetechnik.de

RENAULT SHOCK ABSORBER





KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT43490

OEM NO
 5000452433 - 5010137052
 5001863291 - 5010237285



REFERANCE NO
SACHS
 290475

MONROE
 T5078



MAGNUM / MAJOR / MENAGERR

MAX. - MIN.: 679 - 419

KLÖTZE TECH. NO: KT28876

OEM NO
 7482293227 - 5010294908
 5010294909 - 5010383685
 5010239642 - 5010294528
 5010383686 - 5010557326
 7482293198



REFERANCE NO
SACHS
 311762 -131152 -311828

MONROE
 T5258



PREMIUM

MAX. - MIN.: 880 - 522

KLÖTZE TECH. NO: KT28876

OEM NO
 5010380547
 5010383687
 5010383686
 5010239667
 5010239642



REFERANCE NO
SACHS
 312372

MONROE
 T5147



MAGNUM / PREMIUM

MAX. - MIN.: 756 - 463

KLÖTZE TECH. NO: KT28883

OEM NO
 5010630133
 7420900190
 20806289



REFERANCE NO
SACHS
 311876

MONROE
 T1294



PREMIUM

MAX. - MIN.: 715 - 431

KLÖTZE TECH. NO: KT28868

OEM NO
 5010600393
 5010630386
 5010294158
 5010383689
 5010557482



REFERANCE NO
SACHS
 312718 -131184

MONROE
 T5154



MAGNUM

MAX. - MIN.: 860 - 515

KLÖTZE TECH. NO: KT28880

OEM NO
 5010630728
 21251382
 20726482



REFERANCE NO
SACHS
 312716

MONROE
 T5282



PREMIUM / PREMIUM II

MAX. - MIN.: 865 - 520



**SHOCK
ABSORBER**

**RVI
PARTS**



**KLÖTZE
TECHNIC**

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT28862</p> <p>OEM NO 5010383498 5010488147 5010600336</p> <p>REFERENCE NO SACHS 313213 -313214</p> <p>MONROE V2099</p> <p> MIDLUM</p>	 <p>MAX. - MIN.: 701 - 468</p>	<p>KLÖTZE TECH. NO: KT28861</p> <p>OEM NO 5010383692 - 5010557487 5000752729 - 5010052920 5010294412 - 5010294413 5010383049 - 5010383050 5010383693</p> <p>REFERENCE NO SACHS 310962 -290476 -131047 314899 -131028</p> <p>MONROE T5179 -T1223</p> <p> MAGNUM / PREMIUM</p>	 <p>MAX. - MIN.: 627 - 336</p>
<p>KLÖTZE TECH. NO: KT29088</p> <p>OEM NO 7421909816 7421243060 21243048 21862164 21909816</p> <p>REFERENCE NO SACHS</p> <p>MONROE T5392</p> <p> KERAX / PREMIUM II</p>	 <p>MAX. - MIN.: 770 - 450</p>	<p>KLÖTZE TECH. NO: KT29088</p> <p>OEM NO 5000452402 - 5000452403 5000453922 - 5001857660 5010238077 - 5010294760 5010348438 - 5010488157 5010488160</p> <p>REFERENCE NO SACHS 290473 -313491 -314897</p> <p>MONROE V2103</p> <p> MIDLINER</p>	 <p>MAX. - MIN.: 675 - 418</p>
<p>KLÖTZE TECH. NO: KT35316</p> <p>OEM NO 5010460244 5010629761 25379081 20578877</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0063</p> <p> MIDLUM</p>	 <p>MAX. - MIN.: 227 - 190</p>	<p>KLÖTZE TECH. NO: KT35468</p> <p>OEM NO 5010552010 5010629471 25379070</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0064</p> <p> MAGNUM / PREMIUM II / KERAX</p>	 <p>MAX. - MIN.: 241 - 210</p>

RVI



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT35466

OEM NO
 5010460113
 5010615880
 7420840318
 5010269605
 20721849
 20840318

**REFERANCE NO
 SACHS**
 135050

MONROE
 CB0046



PREMIUM / PREMIUM 2 / KERAX

MAX. - MIN.: 265 - 210

KLÖTZE TECH. NO: KT34466

OEM NO
 5010052405
 5010130535
 5000741014
 5010460114

**REFERANCE NO
 SACHS**
 124737

MONROE
 CB0051



MAGNUM

MAX. - MIN.: 292 - 202

KLÖTZE TECH. NO: KT34467

OEM NO
 5000741013
 5010137139
 5010130534
 5010052404
 5010460115

**REFERANCE NO
 SACHS**
 124735

MONROE
 CB0052



MAGNUM

MAX. - MIN.: 368 - 247

KLÖTZE TECH. NO: KT43491

OEM NO
 5010065309
 5010065311
 5010130609
 5000787974

**REFERANCE NO
 SACHS**
 310956 -124734 -110677

MONROE
 CB0069



MAJOR

MAX. - MIN.: 298 - 232

KLÖTZE TECH. NO: KT34463

OEM NO
 5010130413
 5010130608

**REFERANCE NO
 SACHS**
 124736

MONROE



MAJOR

MAX. - MIN.: 261 - 201

KLÖTZE TECH. NO: KT35462

OEM NO
 5010460318
 5010532897
 5010629397
 20593746

**REFERANCE NO
 SACHS**
 313070 -313069

MONROE
 CB0109



KERAX - PREMIUM II

MAX. - MIN.: -



SHOCK ABSORBER

RVI
PARTS



KLÖTZE TECHNIC

RVI

Model / Details	Description	Replaces Ref. No:	KT No.
-----------------	-------------	-------------------	--------

KLÖTZE TECH. NO: KT35473

OEM NO
5010532895
7482052897
20721512
82052897

REFERANCE NO
SACHS

MONROE
CB0131



KERAX 370/410/450/460/500



MAX. - MIN.: -

KLÖTZE TECH. NO: KT35472

OEM NO
7482039600

REFERANCE NO
SACHS

MONROE
CB0133



KERAX - PREMIUM II



MAX. - MIN.: 265 - 210

KLÖTZE TECH. NO: KT35471

OEM NO
5010316210
5010316560

REFERANCE NO
SACHS
310955 -131040

MONROE
CB0110



PREMIUM / PREMIUM 2 / KERAX



MAX. - MIN.: 311 - 228

KLÖTZE TECH. NO: KT34779

OEM NO
5010615879

REFERANCE NO
SACHS
313072 - 25376537 - 781700002201
781700001622 - 781700004038

MONROE
CB0171



PREMIUM 440 19T 4X2 ECO HR PREMIUM 450 DXL



MAX. - MIN.: -

KLÖTZE TECH. NO: KT35188

OEM NO
5010228908
5010228908A
5010316783A
5010316783
5010269674

REFERANCE NO
SACHS
310957 -131041

MONROE
CB0088



PREMIUM V.I / 400-420



MAX. - MIN.: 310 - 224

KLÖTZE TECH. NO: KT3477

OEM NO
5010228849

REFERANCE NO
SACHS

MONROE
CB0070



MAGNUM E-TECH



MAX. - MIN.: 341 - 257



KT No. *Replaces Ref. No:* *Description* *Model / Details*

KLÖTZE TECH. NO:
KT34780
OEM NO
 5010552241
 7420898055
 7482052893
 20898055

**REFERANCE NO
 SACHS**
MONROE
 CB0118

MAGNUM DXI


MAX. - MIN.: 275 - 191

KLÖTZE TECH. NO:
KT35126
OEM NO
 7421170696
 21430900

**REFERANCE NO
 SACHS**
MONROE
 CB0210

RVI


MAX. - MIN.: -

KLÖTZE TECH. NO:
KT35474
OEM NO
 7421821030
 7421171977

**REFERANCE NO
 SACHS**
MONROE
 CB0240

RVI


MAX. - MIN.: 383 - 291

SHOCK ABSORBER



www.klotzetechnik.de

SCANIA SHOCK ABSORBER

















SHOCK ABSORBER

SCANIA
PARTS



KLÖTZE TECHNIC

SCANIA

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT28994</p> <p>OEM NO 1370267 1968263 1867874 1315959</p> <p>REFERENCE NO SACHS 310783 - 125650 - 314924 123901 - 125998</p> <p>MONROE T1319 - T1330 - T1145</p>  <p>3 SERIES</p>	 <p>MAX. - MIN.: 690 - 410</p>	<p>KLÖTZE TECH. NO: KT28994</p> <p>OEM NO 1370267 1356723 1388417 1110588 395063 1111056</p> <p>REFERENCE NO SACHS 310784 - 125597 - 112890</p> <p>MONROE T1101</p>  <p>140 - 141 LK - LT - LKS - LKT - LHS - 112 - 113 - 142 - 143 R - T</p>	 <p>MAX. - MIN.: 690 - 410</p>
<p>KLÖTZE TECH. NO: KT28639</p> <p>OEM NO 1370093 1380425 1397523 1478507 1519631</p> <p>REFERENCE NO SACHS 310786 - 125599</p> <p>MONROE T5144</p>  <p>4 SERIES - P - G - R - T SERIES</p>	 <p>MAX. - MIN.: 950 - 555</p>	<p>KLÖTZE TECH. NO: KT30014</p> <p>OEM NO 1854537</p> <p>REFERENCE NO SACHS 314738</p> <p>MONROE T5391</p>  <p>4 SERIES</p>	 <p>MAX. - MIN.: 948 - 555</p>
<p>KLÖTZE TECH. NO: KT30124</p> <p>OEM NO 1371447 1371448 1478499 1478500 1861120</p> <p>REFERENCE NO SACHS 125598</p> <p>MONROE T1215</p>  <p>4 SERIES - P - G - R - T SERIES</p>	 <p>MAX. - MIN.: 869 - 500</p>	<p>KLÖTZE TECH. NO: KT29920</p> <p>OEM NO 1427423 2031227 1427424 2031228</p> <p>REFERENCE NO SACHS 290993</p> <p>MONROE T1296</p>  <p>P - G - R - T SERIES - 4 SERIES</p>	 <p>MAX. - MIN.: 800 - 475</p>



KT No. Replaces Ref. No: Description Model / Details

KLÖTZE TECH. NO: KT30155

OEM NO
1547113

REFERANCE NO
SACHS
315275

MONROE
T5439



MAX. - MIN.: 685 - 408



P - G - R - T SERIES

KLÖTZE TECH. NO: KT29971

OEM NO
1438392 - 1438527
1478540 - 1478541
1371447 - 1371448
1478499 - 1478500
1861120

REFERANCE NO
SACHS
311892 - 125598

MONROE
T1215



MAX. - MIN.: 847 - 487



4 SERIES - P - G - R - T SERIES

KLÖTZE TECH. NO: KT30020

OEM NO
1923370

REFERANCE NO
SACHS
315592

MONROE



MAX. - MIN.: 687 - 410



P - G - R - T SERIES

KLÖTZE TECH. NO: KT30056

OEM NO
1303235 - 1307332
1323476 - 1340251
1353371 - 1377056
1379478 - 1478502

REFERANCE NO
SACHS
310773 - 123204 - 125511

MONROE
T5059



MAX. - MIN.: 834 - 484



3 SERIES

KLÖTZE TECH. NO: KT27641

OEM NO
1381808 - 1397525
1110589 - 1479901
1519634 - 1340253
1012046 - 258420
263496 - 366426
395064

REFERANCE NO
SACHS
290011

MONROE
T5242 - T5104



MAX. - MIN.: 608 - 368



3 - 4 SERIES

KLÖTZE TECH. NO: KT27018

OEM NO
1340254 - 1353105 - 1381809
1012162 - 1303235 - 1307332
1309129 - 1323476 - 1340251
1353371 - 1377056 - 1379487
1478502 - 323476 - 350254
377056 - 381809 - 272400

REFERANCE NO
SACHS
125600

MONROE
T5243



MAX. - MIN.: 820 - 480



3 - 4 SERIES










SHOCK ABSORBER

SCANIA
PARTS



KLÖTZE
TECHNIC

SCANIA

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43492</p> <p>OEM NO 20900141 - 1314479 - 1381807 1421062 - 1861118 - 1868265 1012044 - 1340252 - 279011 307111 - 424306</p> <p>REFERENCE NO SACHS 310797 - 125997 -106763 - 131266</p> <p>MONROE T1101 -T1147 -T5241 -T1331</p> <p> 3 - 4 - P - G - R - T SERIES</p>	 <p>MAX. - MIN.: 685 - 407</p>	<p>KLÖTZE TECH. NO: KT27571</p> <p>OEM NO 1110589 - 1012046 - 1340253 1381808 - 1397525 - 1479901 1519634 - 258420 - 263496 366426 - 395064</p> <p>REFERENCE NO SACHS 112889</p> <p>MONROE T1044</p> <p> 92 - 112 - 142 - 3 SERIES</p>	 <p>MAX. - MIN.: 630 - 370</p>
<p>KLÖTZE TECH. NO: KT43493</p> <p>OEM NO 1110531 - 1309129</p> <p>REFERENCE NO SACHS 112209</p> <p>MONROE T1105</p> <p> 142 - 3 SERIES</p>	 <p>MAX. - MIN.: 834 - 484</p>	<p>KLÖTZE TECH. NO: KT29888</p> <p>OEM NO 1861117 - 1420474 - 1868264</p> <p>REFERENCE NO SACHS 125998</p> <p>MONROE T1323 -T1332</p> <p> 4 SERIES - P - G - R - T SERIES</p>	 <p>MAX. - MIN.: 690 - 410</p>
<p>KLÖTZE TECH. NO: KT29848</p> <p>OEM NO 1390898 1478501 1376430 1390898 1478501</p> <p>REFERENCE NO SACHS 000331</p> <p>MONROE T1230</p> <p> 4 SERIES - P - G - R - T SERIES</p>	 <p>MAX. - MIN.: 735 - 430</p>	<p>KLÖTZE TECH. NO: KT29862</p> <p>OEM NO 1365211 1380424 1478506 1519630</p> <p>REFERENCE NO SACHS 131475</p> <p>MONROE T5145</p> <p> P - G - R - T SERIES - 4 SERIES</p>	 <p>MAX. - MIN.: 870 - 523</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT30016
OEM NO

2031229 - 1497641

REFERANCE NO
SACHS
 315276

MONROE

T1361



MAX. - MIN.: 890 - 578


P - G - R - T SERIES - 4 SERIES
KLÖTZE TECH. NO:
KT43494
OEM NO

 1122612 - 1354966 - 395063
 20900141 - 307055 - 1111056
 20900048 - 1327211 - 279011
 1012045 - 1315959 - 20900049
 307111 - 20900040 - 20900145
 1110588 - 1012044 - 1340252
 269692 - 1314479 - 1012097
 1012061 - 1012009 - 1381807

REFERANCE NO
SACHS
MONROE

T1146



MAX. - MIN.: 738 - 440


3 SERIES
KLÖTZE TECH. NO:
KT36035
OEM NO

 1502470
 1502471
 1502472
 1502474
 1505563
 1595642
 1495642

REFERANCE NO
SACHS
MONROE

CB0078 - CB0079



MAX. - MIN.: 337 - 240


R SERIES
KLÖTZE TECH. NO:
KT35950
OEM NO

 1348119 - 1340581
 1348120 - 370227
 393257 - 550365
 1116535 - 1117320
 1117334

REFERANCE NO
SACHS
 105875 - 105876 - 112320
 105845 - 105831

MONROE

CB0065 - CB0014 - CB0060



MAX. - MIN.: 329 - 229


3 SERIES
KLÖTZE TECH. NO:
KT35813
OEM NO

 1495642
 1505563
 1595642

REFERANCE NO
SACHS
 310620

MONROE

CB0134



MAX. - MIN.: 337 - 240


4 CR - CP SERIES
KLÖTZE TECH. NO:
KT35185
OEM NO

 1349840
 1349844
 1382826
 1382827
 1382829
 1424229

REFERANCE NO
SACHS
 105873 - 290989

MONROE

CB0059



MAX. - MIN.: 308 - 211


4 CR - CP SERIES




SCANIA
PARTS



KLÖTZE
TECHNIC

SCANIA

Model / Details	Description	Replaces Ref. No:	KT No.
-----------------	-------------	-------------------	--------

KLÖTZE TECH. NO: **KT35871**

OEM NO
1381904
1397396
1397400
1435859

REFERANCE NO
SACHS
290201 - 290203

MONROE
CB0010



4 SERIES



MAX. - MIN.: 312 - 210

KLÖTZE TECH. NO: **KT36033**

OEM NO
1381906
1397398
1402271
1397394
1435856

REFERANCE NO
SACHS
290202 - 290204 - 290205

MONROE
CB0009



4 SERIES



MAX. - MIN.: 312 - 210

KLÖTZE TECH. NO: **KT35874**

OEM NO
1424228 - 1363122

REFERANCE NO
SACHS
105872 - 290998

MONROE
CB0058



4 CR - CP SERIES



MAX. - MIN.: 308 - 211

KLÖTZE TECH. NO: **KT36030**

OEM NO
1363120 - 1397386 - 1397388
1397390 - 1397392 - 1424227

REFERANCE NO
SACHS
105871 - 290987

MONROE
CB0058 - CB0011



R - CR - CP SERIES



MAX. - MIN.: 308 - 211

KLÖTZE TECH. NO: **KT30153**

OEM NO
1943267
2023668
1466184
1466185
1943268

REFERANCE NO
SACHS
313804 - 313805

MONROE
CB0176



P - G - R - T SERIES TRUCK



MAX. - MIN.: 310 - 210

KLÖTZE TECH. NO: **KT30151**

OEM NO
1761373
1741736

REFERANCE NO
SACHS
315349

MONROE
CB0177



P - G - R - T SERIES TRUCK



MAX. - MIN.: 340 - 236



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT35991

OEM NO
 1731203
 1761372
 2074020
 1731204
 1761374
 1761375
 1761376

**REFERANCE NO
 SACHS**
 317589

MONROE
 CB0178



MAX. - MIN.: 340 - 236



P - G - R - T SERIES TRUCK

KLÖTZE TECH. NO: KT35811

OEM NO
 1910106

**REFERANCE NO
 SACHS**

MONROE
 CB0182



MAX. - MIN.: 328 - 230



P - G - R - T SERIES TRUCK

KLÖTZE TECH. NO: KT36090

OEM NO
 1871657
 1923649
 1105301
 1871615

**REFERANCE NO
 SACHS**

MONROE



MAX. - MIN.: 380 - 281



P - G - R - T SERIES TRUCK

KLÖTZE TECH. NO: KT43495

OEM NO
 1766441
 2023667
 2023668
 2023666

**REFERANCE NO
 SACHS**
 314348

MONROE



MAX. - MIN.: 309 - 204



P - G - R - T SERIES TRUCK

KLÖTZE TECH. NO: KT30032

OEM NO
 2074003

**REFERANCE NO
 SACHS**
 317450

MONROE



MAX. - MIN.: -



P - G - R - T SERIES TRUCK

KLÖTZE TECH. NO: KT35874

OEM NO
 1363122
 1424228

**REFERANCE NO
 SACHS**
 290988 -557001+105871 - 557001+105872
 557001+290201 -557001+290203

MONROE
 CB0058



MAX. - MIN.: 304 - 212



SCANIA 4 & CR-CP SERIES



SHOCK ABSORBER

SCANIA
PARTS



SCANIA

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT35319</p> <p>OEM NO 1435856 1397398 1381906 1402271 1397394</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0009+CB0030 - CB0173</p> <p> SCANIA 4 SERIES</p>	 <p>MAX. - MIN.: 303 - 204</p>	<p>KLÖTZE TECH. NO: KT34534</p> <p>OEM NO 370227 - 393257 - 550365 1116535 - 1117320 - 1117334 1331620 - 1331621 - 1331634 1331635 - 1348117 - 1348118 1348119 - 1348120 - 1340581</p> <p>REFERENCE NO SACHS 481002 - 105845 - 105846 105875 - 105876</p> <p>MONROE CB0066+CB0065 - CB0066+CB0060</p> <p> SCANIA 3 & CR SERIES</p>	 <p>MAX. - MIN.: 332 - 240</p>
<p>KLÖTZE TECH. NO: KT35871</p> <p>OEM NO 1381904+1381919 1381904+1476415 1397400+1381919 1397400+1476415 1435859+1381919</p> <p>REFERENCE NO SACHS 290203</p> <p>MONROE CB0172 - CB0030 - CB0010</p> <p> SCANIA 4 SERIES</p>	 <p>MAX. - MIN.: 312 - 216</p>	<p>KLÖTZE TECH. NO: KT36029</p> <p>OEM NO 1349844 1382826 1382827 1424229 1349844</p> <p>REFERENCE NO SACHS 557001 + 105873 557001 + 290989</p> <p>MONROE CB0059</p> <p> SCANIA 4 & CR-CP SERIES</p>	 <p>MAX. - MIN.: 305 - 207</p>
<p>KLÖTZE TECH. NO: KT35335</p> <p>OEM NO 1870893 1502470 1502472 1502474</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0074 - 717262778</p> <p> SCANIA 4 SERIES</p>	 <p>MAX. - MIN.: 330 - 230</p>	<p>KLÖTZE TECH. NO: KT36035</p> <p>OEM NO 1502474 1595642 1495642 1502473 1505563 1502470 1502471 1502472</p> <p>REFERENCE NO SACHS 310619+310620</p> <p>MONROE</p> <p> SCANIA 4 & CR-CP SERIES</p>	 <p>MAX. - MIN.: 330 - 230</p>



KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT36030

OEM NO

1424227
1363120
1397386
1397388
1397390
1397392

REFERENCE NO

SACHS
310619 + 290987

MONROE



MAX. - MIN.: 303 - 204



4 SERIES

KLÖTZE TECH. NO:

KT36029

OEM NO

1382827
1424229
1349844
1372826
1372829
1349840

REFERENCE NO

SACHS
105873 - 290989 - 557001

MONROE

CB0058 - CB0067



MAX. - MIN.: 312 - 216



SCANIA P - G - R - T - 4 SERIES

KLÖTZE TECH. NO:

KT36030

OEM NO

1424227 - 1363120
1397396 - 1397390
1397392 - 1397386
1397388 - 1431745
1431746 - 1431747

REFERENCE NO

SACHS
312465+290987 - 312465+105871

MONROE



MAX. - MIN.: 303 - 204



SCANIA R & CR-CP SERIES

KLÖTZE TECH. NO:

KT36022

OEM NO

1923645
1870615
1871657
E1105301

REFERENCE NO

SACHS
1802567+1923649

MONROE



MAX. - MIN.: -



SCANIA R-400

KLÖTZE TECH. NO:

KT35817

OEM NO

1873668

REFERENCE NO

SACHS
1907301+1910106

MONROE

CB0194



MAX. - MIN.: 405 - 287



SCANIA R-400

KLÖTZE TECH. NO:

KT35334

OEM NO

1908097
1908098
2493165
1926779

REFERENCE NO

SACHS
1926779+1908098

MONROE

CB0184



MAX. - MIN.: -



P - G - R - T SERIES TRUCK



**SHOCK
ABSORBER**

**SCANIA
PARTS**



**KLÖTZE
TECHNIC**

SCANIA

Model / Details	Description	Replaces Ref. No:	KT No.
-----------------	-------------	-------------------	--------

KLÖTZE TECH. NO: **KT43496**

OEM NO
470273 - 475915
481967 - 429163
426218 - 415848
406694 - 409720
410554

REFERENCE NO
SACHS
106741 - 131067 -112900 - 106749


MONROE
B5290



112 SERIES



MAX. - MIN.: 600 - 363

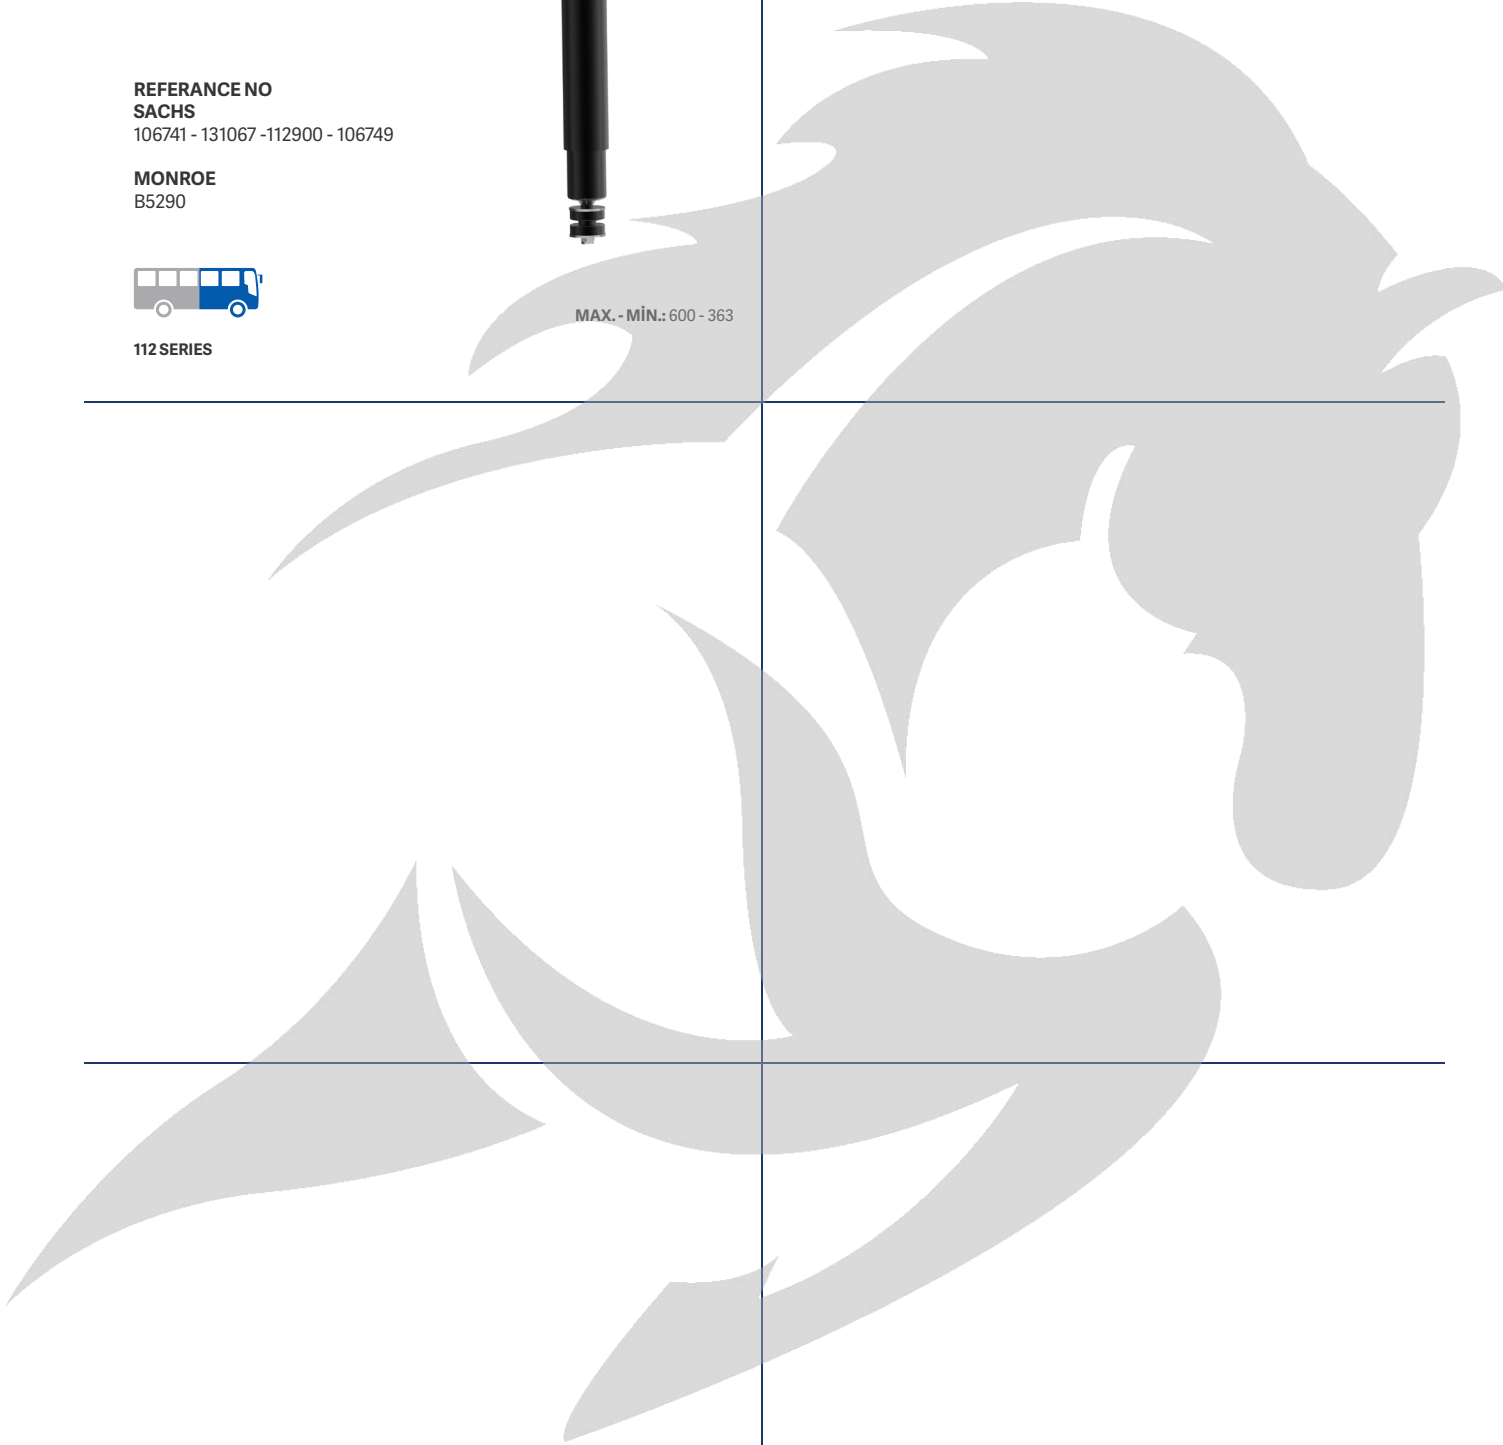

SHOCK ABSORBER



www.klotzetechnik.de

DAF SHOCK ABSORBER





KT No.	Replaces Ref. No:	Description	Model / Details
KLÖTZE TECH. NO: KT28557 OEM NO 1283723 296305 1205672 1283726 1327883 92968 REFERENCE NO SACHS 106976 -124879 -131692 131158 - 131426 -112277 MONROE T5052  F95 - 95XF  MAX. - MIN.: 630 - 380		KLÖTZE TECH. NO: KT27258 OEM NO 252620 1282623 1328748 360585 740021 755262 REFERENCE NO SACHS 124874 -131427 -112145 MONROE T5045  F75 - F85 - F95 - 65CF - 75CF - 85CF - CF85 - 95XF  MAX. - MIN.: 672 - 417	
KLÖTZE TECH. NO: KT27258 OEM NO 1283732 222773 REFERENCE NO SACHS 112002 -112145 -124874 131080 -131427 MONROE T5046  F65 - 75 - 85 - 95 - 65CF - 75CF - CF75 - 85CF - CF85 - 95XF  MAX. - MIN.: 695 - 434		KLÖTZE TECH. NO: KT28562 OEM NO 1398694 -1696290 -1944417 1849370 -1942781 -1382703 1427903 -1618606 -1696291 1944417 -1944418 REFERENCE NO SACHS 290980 -290983 -290979 MONROE T5183 -T5227  95XF - XF95  MAX. - MIN.: 695 - 403	
KLÖTZE TECH. NO: KT28561 OEM NO 1369711 1443695 1606742 REFERENCE NO SACHS 290981 -280927 -290982 MONROE T5180  CF75 - CF85  MAX. - MIN.: 669 - 419		KLÖTZE TECH. NO: KT27492 OEM NO 1283729 379131 REFERENCE NO SACHS 106977 MONROE T5070  CF75 - CF85 - 95  MAX. - MIN.: 840 - 480	



SHOCK ABSORBER

DAF
PARTS



DAF

Model / Details	Description	Replaces Ref. No:	KW No.
<p>KLÖTZE TECH. NO: KT28582</p> <p>OEM NO 1407073</p> <p>REFERANCE NO SACHS 310616</p> <p>MONROE V2140</p>  <p>LF45</p>  <p>MAX. - MIN.: 598 - 348</p>	<p>KLÖTZE TECH. NO: KT28550</p> <p>OEM NO 1610800 1440457</p> <p>REFERANCE NO SACHS 311504</p> <p>MONROE T5357</p>  <p>LF55</p>  <p>MAX. - MIN.: 560 - 380</p>		
<p>KLÖTZE TECH. NO: KT43497</p> <p>OEM NO 1443696 1606743 1649947</p> <p>REFERANCE NO SACHS</p> <p>MONROE T5182</p>  <p>65 - 75 - 85 - 95 - 65CF - 75CF - 85CF - CF75 - CF85 - XF95</p>  <p>MAX. - MIN.: 670 - 420</p>	<p>KLÖTZE TECH. NO: KT28585</p> <p>OEM NO 1706888 1707348 1407069 AFRE002</p> <p>REFERANCE NO SACHS 300026</p> <p>MONROE V2141</p>  <p>LF45</p>  <p>MAX. - MIN.: 613 - 363</p>		
<p>KLÖTZE TECH. NO: KT27493</p> <p>OEM NO 1283730 379132</p> <p>REFERANCE NO SACHS 106975</p> <p>MONROE</p>  <p>95</p>  <p>MAX. - MIN.: 769 - 448</p>	<p>KLÖTZE TECH. NO: KT43498</p> <p>OEM NO 0677975 - 282309 290230 - 677975 0512582 - 0290230 0290926 - 0296466 0677975 - 0500010 0028230</p> <p>REFERANCE NO SACHS 106295</p> <p>MONROE T5123</p>  <p>F2500</p>  <p>MAX. - MIN.: 670 - 420</p>		



KT No. *Replaces Ref. No:* *Description* *Model / Details*

KLÖTZE TECH. NO: **KT43499**

OEM NO
0282309

REFERANCE NO
SACHS
106424

MONROE



MAX. - MIN.: 672 - 422



F2100 - F2300

KLÖTZE TECH. NO: **KT27472**

OEM NO
505464 -1273854 -1283733
1283735 -1283743 -373838
378225 - 505065 - 617739
655776 - 98923

REFERANCE NO
SACHS
101755

MONROE
T5142



MAX. - MIN.: 633 - 369



F2800

KLÖTZE TECH. NO: **KT27493**

OEM NO
106764

REFERANCE NO
SACHS
106027

MONROE
T5211



MAX. - MIN.: 787 - 462



F1600 - F2000 - F2200 - F2600 - F2800

KLÖTZE TECH. NO: **KT27045**

OEM NO
271075 -117562

REFERANCE NO
SACHS
106345

MONROE
T5101



MAX. - MIN.: 688 - 418



F3300

KLÖTZE TECH. NO: **KT43500**

OEM NO
1283736 - 648376 - 220543

REFERANCE NO
SACHS
112053

MONROE



MAX. - MIN.: 825 - 485



F2800 - 95 AT1

KLÖTZE TECH. NO: **KT35221**

OEM NO
1319673
1387326
1623465
1792422
1817663

REFERANCE NO
SACHS
312781 -315586

MONROE
CB0049



MAX. - MIN.: 278 - 208



95 - 95XF



SHOCK ABSORBER

DAF
PARTS



DAF

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT35220</p> <p>OEM NO 1319672 1337159 1387327 1623464</p> <p>REFERENCE NO SACHS 312780 -315587</p> <p>MONROE CB0044</p>  <p>95XF - XF95 - XF105</p>	 <p>MAX. - MIN.: 332 - 262</p>	<p>KLÖTZE TECH. NO: KT34547</p> <p>OEM NO 1265275 1265277 375222</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0048</p>  <p>95</p>	 <p>MAX. - MIN.: 278 - 208</p>
<p>KLÖTZE TECH. NO: KT43501</p> <p>OEM NO 762784 375221 1377827 1818918 1265276</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0186 -CB0012 -CB0043</p>  <p>95 - CF65 - CF75 - CF85</p>	 <p>MAX. - MIN.: 332 - 262</p>	<p>KLÖTZE TECH. NO: KT35224</p> <p>OEM NO 1265272 1377828 1792420 1230942</p> <p>REFERENCE NO SACHS 312779</p> <p>MONROE CB0045</p>  <p>CF65 - CF75 - CF85 - 65 - 75 - 85</p>	 <p>MAX. - MIN.: 284 - 243</p>
<p>KLÖTZE TECH. NO: KT35223</p> <p>OEM NO 1260941 1265271 1377825 1818916</p> <p>REFERENCE NO SACHS 312778</p> <p>MONROE CB0032 - CB0187</p>  <p>CF65 - CF75 - CF85</p>	 <p>MAX. - MIN.: 332 - 262</p>	<p>KLÖTZE TECH. NO: KT35222</p> <p>OEM NO 1303516 1436055</p> <p>REFERENCE NO SACHS</p> <p>MONROE CB0042</p>  <p>95XF - XF95 - XF105</p>	 <p>MAX. - MIN.: 246 - 200</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT35227

OEM NO
 1380606 -1436060 -1609020

REFERANCE NO
SACHS

MONROE
 CB0047



MAX. - MIN.: 225 - 177




CF65 - CF75 - CF85

KLÖTZE TECH. NO: KT35228

OEM NO
 1377826 -1451155 -1792419

REFERANCE NO
SACHS

MONROE
 CB0013



MAX. - MIN.: -



CF65 - CF75 - CF85

KLÖTZE TECH. NO: KT35234

OEM NO
 1407081
 1403390
 1405892
 1703588
 AFRE013
 AFRU075

REFERANCE NO
SACHS

MONROE
 CB0125



MAX. - MIN.: -



DAF

KLÖTZE TECH. NO: KT43502

OEM NO
 1407079
 1403404
 1405470
 AFRE011

REFERANCE NO
SACHS

MONROE
 CB0124



MAX. - MIN.: -



DAF LF45 / LF55

KLÖTZE TECH. KT34548

OEM NO
 1265281 - 1285393 - 1321590
 1353450 - 1353453 - 1371065
 1444147 - 1622211 - 375224

REFERANCE NO
SACHS

MONROE
 CB0033



MAX. - MIN.: 320 - 275



CF / XF / 95

KLÖTZE TECH. KT35225

OEM NO
 1265282 - 1285394 - 1321591
 1353451 - 1353454 - 1371066
 1623477 - 299862 - 1792421
 1792423

REFERANCE NO
SACHS

MONROE
 CB0034



MAX. - MIN.: 280 - 235



CF / XF / 95

SHOCK ABSORBER



www.klotzetechnik.de

VOLVO SHOCK ABSORBER





SHOCK ABSORBER

VOLVO
PARTS



VOLVO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT29498</p> <p>OEM NO 1629485 - 3987958</p> <p>REFERENCE NO SACHS 125648</p> <p>MONROE T1178</p>  <p>FH12 - FH16 SERIES</p>	 <p>MAX. - MIN.: 715 - 450</p>	<p>KLÖTZE TECH. NO: KT27686</p> <p>OEM NO 20374545 20900497 1076717 1629478 3987957</p> <p>REFERENCE NO SACHS 131595 - 310774 - 124247</p> <p>MONROE T1177 - T1023</p>  <p>F - FH - FM SERIES</p>	 <p>MAX. - MIN.: 715 - 450</p>
<p>KLÖTZE TECH. NO: KT29725</p> <p>OEM NO 1628103 1629482 1629483</p> <p>REFERENCE NO SACHS 310785 - 123899</p> <p>MONROE T5098</p>  <p>F7 - F10 - F12 - F16 SERIES</p>	 <p>MAX. - MIN.: 815 - 475</p>	<p>KLÖTZE TECH. NO: KT29639</p> <p>OEM NO 20585555 21172388 20374544 1079150</p> <p>REFERENCE NO SACHS 311657 - 131693</p> <p>MONROE T5177</p>  <p>FH - FH12 - FH16 - FL - FM9 - FM12</p>	 <p>MAX. - MIN.: 774 - 470</p>
<p>KLÖTZE TECH. NO: KT29725</p> <p>OEM NO 1628136 1628103 1629483</p> <p>REFERENCE NO SACHS 124601</p> <p>MONROE T5097</p>  <p>FH12 - FH16 - FL12 - FM7 - FM9 - FM12</p>	 <p>MAX. - MIN.: 799 - 484</p>	<p>KLÖTZE TECH. NO: KT29027</p> <p>OEM NO 1629477</p> <p>REFERENCE NO SACHS 125646</p> <p>MONROE T5096</p>  <p>FH - FH12 - FH16 - FM - FM7 - FM9 - FM10 - FM12 SERIES</p>	 <p>MAX. - MIN.: 705 - 410</p>



KT No.	Replaces Ref. No:	Description	Model / Details
--------	-------------------	-------------	-----------------

KLÖTZE TECH. NO:

KT28878

OEM NO
7420583421
1629405

REFERENCE NO
SACHS
125649

MONROE
T5091



F - FE - FH - FM SERIES - PREMIUM SERIES

MAX. - MIN.: 715 - 425

KLÖTZE TECH. NO:

KT28873

OEM NO
7420374543
7420854448
20585556
21172387
1079151
20374543

REFERENCE NO
SACHS
311656 -131695

MONROE
T5170 -T5371



FH - FH12 - FH16 - FM9 - FM12 SERIES

MAX. - MIN.: 833 - 498

KLÖTZE TECH. NO:

KT29494

OEM NO
1599623
1609553
1609555
1610920
1610921
1613248

REFERENCE NO
SACHS
112130 -310787 - 112125
106786 - 112123

MONROE
T1005



FL7 - FL10 - FL12 SERIES

MAX. - MIN.: 655 - 415

KLÖTZE TECH. NO:

KT27029

OEM NO
20374547

REFERENCE NO
SACHS
300009

MONROE
T5395



FH - FH12 - FH16 - FM

MAX. - MIN.: 715 - 443

KLÖTZE TECH. NO:

KT28870

OEM NO
20806285
20906906
5010630702
7420867988

REFERENCE NO
SACHS
312710

MONROE
T1272



FE SERIES

MAX. - MIN.: 668 - 408

KLÖTZE TECH. NO:

KT29505

OEM NO
1094523
8159833
20532767
20769819

REFERENCE NO
SACHS
312706 -131296 -

MONROE
T1149



FH - FH16

MAX. - MIN.: 725 - 450










**SHOCK
ABSORBER**

**VOLVO
PARTS**

**KLÖTZE
TECHNIC**

VOLVO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT29632</p> <p>OEM NO 1628189 1629480 1691617 3987960</p> <p>REFERENCE NO SACHS 124915</p> <p>MONROE T1176</p>  <p>FH12 - FH16 - FL12 - FM7 - FM9 - FM12</p>	 <p>MAX. - Min.: 781 - 481</p>	<p>KLÖTZE TECH. NO: KT28714</p> <p>OEM NO 1598105 1609005</p> <p>REFERENCE NO SACHS 112127</p> <p>MONROE T5066 -T5094</p>  <p>FH10 - FH12 - FL10 - FL12</p>	 <p>MAX. - Min.: 837 - 497</p>
<p>KLÖTZE TECH. NO: KT29626</p> <p>OEM NO 1598106</p> <p>REFERENCE NO SACHS 112128</p> <p>MONROE T5155</p>  <p>F10 - F12 - FH12 - FH16 - FL7 - FL10 - FL12 - FM7 - FM10 - FM12</p>	 <p>MAX. - Min.: 842 - 512</p>	<p>KLÖTZE TECH. NO: KT29627</p> <p>OEM NO 1628359 1629993 21127043 1612217</p> <p>REFERENCE NO SACHS 124248 -112124</p> <p>MONROE T5110</p>  <p>F10 - F12 - F16 - FH10 - FH12 - FH16 - FL6 - FL7 - FL10 - FL12 - FM9 - FM10 - FM12 - NL10 - NL12</p>	 <p>MAX. - Min.: 732 - 442</p>
<p>KLÖTZE TECH. NO: KT29531</p> <p>OEM NO 20374546 20374549 1629485 3987958</p> <p>REFERENCE NO SACHS 131694</p> <p>MONROE T5184</p>  <p>FH - FH12 - FH16 - FM7 - FM9 - FM10 - FM12 SERIES</p>	 <p>MAX. - Min.: 720 - 444</p>	<p>KLÖTZE TECH. NO: KT29624</p> <p>OEM NO 1605163</p> <p>REFERENCE NO SACHS 112126</p> <p>MONROE T5093</p>  <p>F10 - F12 - FL7 - FL10 - FL12</p>	 <p>MAX. - Min.: 799 - 484</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: **KT28712**

OEM NO
1609002
1609001
20766061
21232661

REFERANCE NO
SACHS
125510

MONROE
T5367



MAX. - MIN.: 880 - 530



FH - FH12 - FH16 - FL10 - FL12 - FM - FM7 - FM9 - FM10 - FM12

KLÖTZE TECH. NO: **KT29499**

OEM NO
1629920
1629481
3987961

REFERANCE NO
SACHS
125647

MONROE
T1179



MAX. - MIN.: 883 - 528



VOLVO FH12 / FH16 FR

KLÖTZE TECH. NO: **KT29500**

OEM NO
20367750
3987959
1629475

REFERANCE NO
SACHS
300006

MONROE
T1180 - T1276



MAX. - MIN.: 714 - 452



VOLVO FL6

KLÖTZE TECH. NO: **KT29539**

OEM NO
1629992
3171962
20374548

REFERANCE NO
SACHS
131270

MONROE



MAX. - MIN.: 720 - 450



VOLVO FH / FH12 / FH16 / FM7 / FM9 / FM10 / FM12

KLÖTZE TECH. NO: **KT35469**

OEM NO
5000356647
5010277261
5010559508
1576443
1585586
1622085

REFERANCE NO
SACHS
312273

MONROE
CB0025



MAX. - MIN.: 242 - 185



MIDLINER / MANAGAR / MAXTER / G SERIES

KLÖTZE TECH. NO: **KT35716**

OEM NO
1629722

REFERANCE NO
SACHS
290491 - 315583

MONROE
CB0028



MAX. - MIN.: 428 - 299



FH / FH12 / FH16 SERIES



SHOCK ABSORBER

VOLVO
PARTS



VOLVO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT35719</p> <p>OEM NO 1076860 1075445 3172986 3198859 20721166 20960913 21137458</p> <p>REFERENCE NO SACHS 312694</p> <p>MONROE CB0004 - CB0005</p>  <p>FH / FH16 / FM / FM7 / FM10 / FM12 SERIES</p>	 <p>MAX. - MIN.: 412 - 330</p>	<p>KLÖTZE TECH. NO: KT34734</p> <p>OEM NO 21111925 - 3198836</p> <p>REFERENCE NO SACHS 312695</p> <p>MONROE CB0040</p>  <p>FH / FH16 / FM</p>	 <p>MAX. - MIN.: 335 - 225</p>
<p>KLÖTZE TECH. NO: KT35718</p> <p>OEM NO 1622227 - 3198849 - 3986315</p> <p>REFERENCE NO SACHS 290493 - 315851</p> <p>MONROE CB0007</p>  <p>FH / FH12 / FH16 / FM SERIES</p>	 <p>MAX. - MIN.: 254 - 209</p>	<p>KLÖTZE TECH. NO: KT35717</p> <p>OEM NO 1629721</p> <p>REFERENCE NO SACHS 290489 - 315499 - 315582</p> <p>MONROE CB0029</p>  <p>FH / FH12 / FH16 SERIES</p>	 <p>MAX. - MIN.: 402 - 310</p>
<p>KLÖTZE TECH. NO: KT43503</p> <p>OEM NO 1599459 1622086 6794392</p> <p>REFERENCE NO SACHS 312395</p> <p>MONROE CB0026</p>  <p>F10 / F12 / F16 SERIES</p>	 <p>MAX. - MIN.: 242 - 185</p>	<p>KLÖTZE TECH. NO: KT35713</p> <p>OEM NO 1580389</p> <p>REFERENCE NO SACHS 313834</p> <p>MONROE CB0021</p>  <p>F7 / F10 / F12 / F16 SERIES</p>	 <p>MAX. - MIN.: 335 - 265</p>



KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT35782

OEM NO
21171973

REFERANCE NO
SACHS

MONROE
CB0211



FM



MAX. - MIN.: -

KLÖTZE TECH. NO:

KT27091

OEM NO
21171975
22128971

REFERANCE NO
SACHS

MONROE
CB0208



FH II SERIES



MAX. - MIN.: 194 - 174

KLÖTZE TECH. NO:

KT35781

OEM NO
21168663

REFERANCE NO
SACHS

MONROE
CB0204



FH



MAX. - MIN.: 256 - 235

KLÖTZE TECH. NO:

KT29545

OEM NO
21739593
22040665

REFERANCE NO
SACHS

MONROE
CB0175



FH / FM



MAX. - MIN.: -

KLÖTZE TECH. NO:

KT35783

OEM NO
21430905

REFERANCE NO
SACHS

MONROE
CB0209



FM SERIES



MAX. - MIN.: 226 - 202

KLÖTZE TECH. NO:

KT29734

OEM NO
21170510
21739591
22040653

REFERANCE NO
SACHS

MONROE
CB0205 -CB0206



FH / FM



MAX. - MIN.: -



**SHOCK
ABSORBER**

**VOLVO
PARTS**

**KLÖTZE
TECHNIC**

VOLVO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT34733</p> <p>OEM NO 1075478</p>  <p>REFERENCE NO SACHS</p> <p>MONROE CB0008</p>  <p>FM7 - FM10 - FM12</p> <p>MAX. - MIN.: 326 - 218</p>	<p>KLÖTZE TECH. NO: KT35738</p> <p>OEM NO 1076855 - 20427897 - 20721169 20775212 - 20889134 - 20721167 20736464 - 20889138 - 21032337 21651231 - 3172 985 - 3198 850 22144200</p>  <p>REFERENCE NO SACHS 316373</p> <p>MONROE CB0006</p>  <p>FH 12 & FH 16</p> <p>MAX. - MIN.: 410 - 355</p>		
<p>KLÖTZE TECH. NO: KT34731</p> <p>OEM NO 3172984 1629719 1629724</p>  <p>REFERENCE NO SACHS</p> <p>MONROE CB0003</p>  <p>FH 12 & FH 16</p> <p>MAX. - MIN.: 430 - 290</p>	<p>KLÖTZE TECH. NO: KT35735</p> <p>OEM NO 20453258 20889132 -1</p>  <p>REFERENCE NO SACHS</p> <p>MONROE CB0039 + CB0055</p>  <p>FH 12</p> <p>MAX. - MIN.: 384 - 272</p>		
<p>KLÖTZE TECH. NO: KT35735</p> <p>OEM NO 21111932-1 20889136</p>  <p>REFERENCE NO SACHS</p> <p>MONROE CB0214</p>  <p>FH 12</p> <p>MAX. - MIN.: 384 - 272</p>	<p>KLÖTZE TECH. NO: KT34732</p> <p>OEM NO 1075076 1075077</p>  <p>REFERENCE NO SACHS</p> <p>MONROE CB0002</p>  <p>FH 12 & FH 16</p> <p>MAX. - MIN.: 405 - 345</p>		



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT29576

OEM NO
21170611
22040662

REFERENCE NO
SACHS

MONROE
CB0207



FH4

MAX. - Min.: -

KLÖTZE TECH. NO: KT35735

OEM NO
20453258
20889136
21111942
3198837

REFERENCE NO
SACHS

MONROE
CB0212



RVI FM 330-370-380-410-420-450-460-500

MAX. - Min.: 384 - 272

KLÖTZE TECH. NO: KT43504

OEM NO
21880100

REFERENCE NO
SACHS

MONROE
CB0215



FM 330-370-380-410-420-450-460-500

MAX. - Min.: 383 - 291

KLÖTZE TECH. NO: KT35784

OEM NO
21171976
22040666

REFERENCE NO
SACHS

MONROE
CB0213



FH4

MAX. - Min.: 379 - 334

KLÖTZE TECH. NO: KT43505

OEM NO
1190741
1130539
365377

REFERENCE NO
SACHS
106559

MONROE



B51/B59

MAX. - Min.: 610 - 370

KLÖTZE TECH. NO: KT29497

OEM NO
3037213 - 3178737
3036106 - 3027423
3027113 - 3178738
20540056 - 20543860
20568804

REFERENCE NO
SACHS
125756 - 131029 - 280932

MONROE
B1343 - B5296 - B1280



B10/B12

MAX. - Min.: 703 - 438



**SHOCK
ABSORBER**

**VOLVO
PARTS**



**KLÖTZE
TECHNIC**

VOLVO

Model / Details

Description

Replaces Ref. No:

KT No.

KLÖTZE TECH. NO:

KT29631

OEM NO
1136644
1134749

REFERANCE NO
SACHS
112119

MONROE



B10



MAX. - MIN.: 655 - 415

KLÖTZE TECH. NO:

KT43506

OEM NO
1136643
1134748
1137026
1137027
20385020
3159800

REFERENCE NO
SACHS
106889 -123451 -312557 -314978

MONROE
B5339



B9/B10



MAX. - MIN.: 644 - 410

SHOCK ABSORBER



www.klotzetechnik.de

IVECO SHOCK ABSORBER





KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT27630

OEM NO
41033039
41214461
41214700
41225418
41296211
41296216

REFERANCE NO
SACHS
131377 - 310049

MONROE
T5269



MAX. - MIN.: 652 - 402

DAILY / EUROSTAR / EUROTECH / EUROTRAKKER / STRALIS

KLÖTZE TECH. NO:

KT29360

OEM NO
500367642 -500369632
504043717 -504043883
504088408 - 504152176
504088409 - 5801345775
93828951

REFERANCE NO
SACHS
131907 -312378

MONROE
V2516



MAX. - MIN.: 433 - 283

IVECO DAILY 35.10 02-12/ 49.10 02-12 / 49.12 02-12

KLÖTZE TECH. NO:

KT43507

OEM NO
500305418 - 500337443
500367032 - 500368636
500369631 - 500377620
93828781 - 2997265
4854829

REFERANCE NO
SACHS
000369 -131909

MONROE
V2515



MAX. - MIN.: 575 - 352

IVECO DAILY 35.10 02-12 /49.10 02-12 /49.12 02-12

KLÖTZE TECH. NO:

KT29349

OEM NO
41033239
41296758
500320015

REFERANCE NO
SACHS
131948

MONROE
T5267



MAX. - MIN.: 820 - 500

EUROSTAR / EUROTECH / STARLIS / DAILY II

KLÖTZE TECH. NO:

KT29338

OEM NO
41033038
41214460
41214818

REFERANCE NO
SACHS
131621

MONROE
T1261



MAX. - MIN.: 754 - 434

EUROSTART / EUROTECH / STARALIS

KLÖTZE TECH. NO:

KT43508

OEM NO
42052982
4697041

REFERANCE NO
SACHS
300077 -314600

MONROE
T1130



MAX. - MIN.: 759 - 453

EUROTECH / TURBOTECH / TURBOSTAR



**SHOCK
ABSORBER**

**IVECO
PARTS**



IVECO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT29346</p> <p>OEM NO 98408701 98411159 99451732 98415100 99451740</p> <p>REFERENCE NO SACHS 112498 -125401</p> <p>MONROE V2108</p>  <p>EUROCARGO</p>	 <p>MAX. - MIN.: 669 - 404</p>	<p>KLÖTZE TECH. NO: KT29385</p> <p>OEM NO 98408700 98411160 99451729 504063455 504148139</p> <p>REFERENCE NO SACHS 112554</p> <p>MONROE V2104 -V2137</p>  <p>EUROCARGO</p>	 <p>MAX. - MIN.: 618 - 381</p>
<p>KLÖTZE TECH. NO: KT29339</p> <p>OEM NO 99474639 98488107 99432314</p> <p>REFERENCE NO SACHS 124856</p> <p>MONROE T5274</p>  <p>EUROSTAR / EUROTECH</p>	 <p>MAX. - MIN.: 652 - 402</p>	<p>KLÖTZE TECH. NO: KT29342</p> <p>OEM NO 41032334 - 41218439 41218445 - 41218447 98414529 - 98414535 98430150 - 98432435 99474644 - 99474655</p> <p>REFERENCE NO SACHS 131625 -124864 -124865</p> <p>MONROE T1137</p>  <p>EUROTRAKKER / EUROTECH</p>	 <p>MAX. - MIN.: 754 - 439</p>
<p>KLÖTZE TECH. NO: KT29358</p> <p>OEM NO 98447153 98482579 99465084</p> <p>REFERENCE NO SACHS 125935</p> <p>MONROE T1128</p>  <p>EUROCARGO</p>	 <p>MAX. - MIN.: 714 - 414</p>	<p>KLÖTZE TECH. NO: KT29357</p> <p>OEM NO 98436446 98438405 98445195 99431723 99473749 99485542 99465087</p> <p>REFERENCE NO SACHS 280923 -125941</p> <p>MONROE T1243</p>  <p>EUROCARGO</p>	 <p>MAX. - MIN.: 674 - 404</p>



KT No. **Replaces Ref. No:** **Description** **Model / Details**

KLÖTZE TECH. NO: KT29367
OEM NO

98408707 - 98411167 - 98482154
 99465079 - 4859825 - 504148145
 98408706 - 98408709 - 98411172
 98415096 - 98419046 - 98445162
 99465078 - 99465081 - 99465082

REFERANCE NO

SACHS
 125938

MONROE

T1244



MAX. - MIN.: 686 - 407



EUROCARGO

KLÖTZE TECH. NO: KT27081
OEM NO

41006921
 41218440
 41296756
 99474646
 33139100

REFERANCE NO

SACHS
 125939

MONROE

T1265



MAX. - MIN.: 492 - 322



STRALIS - EUROTECH - EUROTRAKKER - EUROSTAR

KLÖTZE TECH. NO: KT43509
OEM NO

41005022
 41218444
 99474657

REFERANCE NO

SACHS
 125402

MONROE


MAX. - MIN.: 778 - 448



180 / 190/260/330/380/400/440/560/720

KLÖTZE TECH. NO: KT43510
OEM NO

42052987

REFERANCE NO

SACHS

MONROE

T1131



MAX. - MIN.: 651 - 401



EUROTECH / TURBOTECH / TURBOSTAR

KLÖTZE TECH. NO: KT29359
OEM NO

2997267 - 504052221
 98408702 - 98411158
 99451728 - 504063456
 504148138 - 98464210
 99451744

REFERANCE NO

SACHS
 112555 -131206

MONROE

V2106 -V2107



MAX. - MIN.: 664 - 394



EUROCARGO

KLÖTZE TECH. NO: KT29347
OEM NO

04859825 - 98408706
 98415096 - 504148145
 98408707 - 98408709
 98411167 - 98411172
 98419046 - 98445162
 98482154 - 99465078
 99465079 - 99465081
 99465082

REFERANCE NO

SACHS
 125938

MONROE

T1244



MAX. - MIN.: 686 - 407



EUROCARGO



SHOCK ABSORBER

IVECO
PARTS



IVECO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT27666</p> <p>OEM NO 41033735 99488017</p> <p>REFERANCE NO SACHS</p> <p>MONROE T1270</p> <p> STRALIS</p>	 <p>MAX. - MIN.: 805 - 465</p>	<p>KLÖTZE TECH. NO: KT29350</p> <p>OEM NO 41218432 98498740 99474638</p> <p>REFERANCE NO SACHS 314921 -125889</p> <p>MONROE T5267</p> <p> EUROSTAR / EUROTECH / EUROTRAKKER</p>	 <p>MAX. - MIN.: 840 - 495</p>
<p>KLÖTZE TECH. NO: KT29823</p> <p>OEM NO 99458562 93163957</p> <p>REFERANCE NO SACHS</p> <p>MONROE T1307</p> <p> EUROCARGO</p>	 <p>MAX. - MIN.: 621 - 394</p>	<p>KLÖTZE TECH. NO: KT29384</p> <p>OEM NO 41218443 98414527 98475501 98485037 98485038 99474645 99474649</p> <p>REFERANCE NO SACHS 125931</p> <p>MONROE T1264</p> <p> EUROTECH - EUROCAKKER - EUROSTAR</p>	 <p>MAX. - MIN.: 593 - 380</p>
<p>KLÖTZE TECH. NO: KT29340</p> <p>OEM NO 500310131 41033734</p> <p>REFERANCE NO SACHS</p> <p>MONROE T5268</p> <p> STRALIS</p>	 <p>MAX. - MIN.: 930 - 550</p>	<p>KLÖTZE TECH. NO: KT29381</p> <p>OEM NO 98480455 99473748 99473798</p> <p>REFERANCE NO SACHS 125934 -300023</p> <p>MONROE T1354</p> <p> EUROCARGO</p>	 <p>MAX. - MIN.: 820 - 470</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT43511
OEM NO
 99465092
 98474682

REFERENCE NO
SACHS
 311197

MONROE


MAX. - MIN.: -


EUROCARGO 95E-135E
KLÖTZE TECH. NO:
KT29348
OEM NO
 98430151
 98432436
 99474620

REFERENCE NO
SACHS
 131255

MONROE
 T5252


MAX. - MIN.: 735 - 427


EUROTECH - EUROTRAKKER - EUROSTAR
KLÖTZE TECH. NO:
KT29370
OEM NO
 98415098
 98426865
 99451736
 99451739
 504148140
 4844580

REFERENCE NO
SACHS
 123936 -123937

MONROE
 V2105


MAX. - MIN.: 660 - 398


EUROCARGO 60EK - 65EK - 75EK
KLÖTZE TECH. NO:
KT43512
OEM NO
 500314647
 98431529
 99448976

REFERENCE NO
SACHS
 131101

MONROE


MAX. - MIN.: -


EUROCARGO 95E-135E
KLÖTZE TECH. NO:
KT43513
OEM NO
 41007947
 98414530
 98466168
 99474631

REFERENCE NO
SACHS
 125403

MONROE


MAX. - MIN.: 720 - 410


EUROTECH - EUROTRAKKER - EUROSTAR
KLÖTZE TECH. NO:
KT29380
OEM NO
 41218442
 98414526
 99474647

REFERENCE NO
SACHS
 125933

MONROE


MAX. - MIN.: 647 - 382


EUROTECH - EUROTRAKKER - EUROSTAR - EUROCARGO



SHOCK ABSORBER

IVECO
PARTS



IVECO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT29375</p> <p>OEM NO 500378189 - 504043876 500378190 - 504043882 504064993 - 504069580 504152184 - 580134577</p> <p>REFERENCE NO SACHS 131906</p> <p>MONROE V2136</p> <p> DAILY 29L - 35S</p>	 <p>MAX. - MIN.: 478 - 316</p>	<p>KLÖTZE TECH. NO: KT29370</p> <p>OEM NO 98426866 99451738 4858811</p> <p>REFERENCE NO SACHS 125388</p> <p>MONROE V2109</p> <p> EUROCARGO 60EK - 65EK - 75EK</p>	 <p>MAX. - MIN.: 695 - 424</p>
<p>KLÖTZE TECH. NO: KT27628</p> <p>OEM NO 41214698 99488018 41210787</p> <p>REFERENCE NO SACHS</p> <p>MONROE T5264</p> <p> STRALIS</p>	 <p>MAX. - MIN.: 776 - 467</p>	<p>KLÖTZE TECH. NO: KT29347</p> <p>OEM NO 500301936 98445861 99465083</p> <p>REFERENCE NO SACHS 131164</p> <p>MONROE T1245</p> <p> EUROCARGO</p>	 <p>MAX. - MIN.: 725 - 435</p>
<p>KLÖTZE TECH. NO: KT43514</p> <p>OEM NO 43906</p> <p>REFERENCE NO SACHS</p> <p>MONROE</p> <p> E27.14, E29.14, 31.17 101, 31.17 110 MIDIBUS FR</p>	 <p>MAX. - MIN.: 618 - 381</p>	<p>KLÖTZE TECH. NO: KT43515</p> <p>OEM NO 41005918 - 500307352 500307353 - 41005917 500307354 - 500307355 500353511 - 500353513 500379694</p> <p>REFERENCE NO SACHS 115897 - 115737</p> <p>MONROE CB0093</p> <p> EUROTECH</p>	 <p>MAX. - MIN.: 378 - 300</p>


KT No.
Replaces Ref. No:
Description
Model / Details
KLÖTZE TECH. NO:
KT43516
OEM NO
 500392874
 504080349
 504047432
 504084379
 504115381

REFERENCE NO
SACHS
 315520

MONROE
 CB0154

STARALIS
MAX. - MIN.: 426 - 372

KLÖTZE TECH. NO:
KT35607
OEM NO
 504084378
 504115380
 500392873
 504080348

REFERENCE NO
SACHS
 311881 - 311882

MONROE
 CB0153

STRALIS
MAX. - MIN.: 436 - 372

KLÖTZE TECH. NO:
KT35606
OEM NO
 504228086 - 500348789
 99454197 - 99433008
 99433007 - 99454195
 99454196 - 99433009
 41005984

REFERENCE NO
SACHS
 105424 - 105863 - 105864 - 105865
 - 105840

MONROE
 CB0073

EUROSTAR / EUROTRAKKER / EUROTECH
MAX. - MIN.: 268 - 196

KLÖTZE TECH. NO:
KT35611
OEM NO
 504080441
 504057814
 504057816
 504084381

REFERENCE NO
SACHS
 311878

MONROE
 CB0151

STARALIS
MAX. - MIN.: 446 - 384

KLÖTZE TECH. NO:
KT43517
OEM NO
 504055167
 504055168
 504080440
 504084380
 504115382

REFERENCE NO
SACHS
 311879 - 311880

MONROE
 CB0152

STARALIS
MAX. - MIN.: 443 - 384

KLÖTZE TECH. NO:
KT35613
OEM NO
 41028759
 41028760
 500348797
 500377861
 41028761
 41028762
 500332741
 500377859

REFERENCE NO
SACHS
 115739 - 115727 - 115740

MONROE
 CB0095

EUROTRAKKER / EUROTECH
MAX. - MIN.: 400 - 350



**SHOCK
ABSORBER**

**IVECO
PARTS**



**KLÖTZE
TECHNIC**

IVECO

Model / Details	Description	Replaces Ref. No:	KT No.
<p>KLÖTZE TECH. NO: KT43518</p> <p>OEM NO 42001827 42001826</p> <p>REFERENCE NO SACHS 125157</p> <p>MONROE CB0159</p>  <p>NC SERIES</p>	 <p>MAX. - MIN.: 325 - 265</p>	<p>KLÖTZE TECH. NO: KT35594</p> <p>OEM NO 500357351 2997823 500340705</p> <p>REFERENCE NO SACHS 310820 -737100000892</p> <p>MONROE CB0137</p>  <p>IVECO STRALIS Após 2007</p>	 <p>MAX. - MIN.: 429 - 325</p>
<p>KLÖTZE TECH. NO: KT35601</p> <p>OEM NO 504080540 2997842 504084382</p> <p>REFERENCE NO SACHS 313055</p> <p>MONROE CB0219</p>  <p>STRALIS</p>	 <p>MAX. - MIN.: -</p>	<p>KLÖTZE TECH. NO: KT35595</p> <p>OEM NO 504060241 97383888 504060233 2997845</p> <p>REFERENCE NO SACHS 311884 -731700000277 -731700002845</p> <p>MONROE CB0149</p>  <p>EUROTECH-STRALIS</p>	 <p>MAX. - MIN.: 443 - 341</p>
<p>KLÖTZE TECH. NO: KT35599</p> <p>OEM NO 500307338 500352808 500379698 98472734 99438514 99455937</p> <p>REFERENCE NO SACHS 115902 -115731</p> <p>MONROE CB0098</p>  <p>EUROSTAR-EUROTECH TYPE L</p>	 <p>MAX. - MIN.: 381 - 307</p>	<p>KLÖTZE TECH. NO: KT35598</p> <p>OEM NO 41028764 500348793 41028763 500377878 H53:H54</p> <p>REFERENCE NO SACHS 115743</p> <p>MONROE CB0099</p>  <p>EUROSTAR-EUROTECH- EUROTRAKKER</p>	 <p>MAX. - MIN.: 398 - 324</p>





KT No.

Replaces Ref. No:

Description

Model / Details

KLÖTZE TECH. NO:

KT35597

OEM NO
500357352
500340706
500357353

REFERANCE NO
SACHS
310821 -731700135079

MONROE
CB0136



STRALIS

MAX. - MIN.: 332 - 252

SHOCK ABSORBER





KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT29023	170181 312978	F5190	237027000 - 237228900 - 237228902 2376002700 - 2376003500 - 196121 013774 - 016270	REAR	429	291	24x55	24x55	10
KT28547	170182 125442	F5004	237228300 - 237228302 - 237229000 237021600 - 237021900 - 237025200 237023600 - 237220400 - 1336821	REAR	497	328	24x55	24x55	10
KT27168	170177	F5008 - F5009	237025100 237024800	REAR	700	430	24x55	24x55	10
KT28545	101823	F5126	237021000 - 1336819 - 1336820 - 2376001900 237026700 - 30000216 - 001405 - 014050 237021800 - 700196116	REAR	800	480	24x55	24x55	10
KT28545	170183 106201	F5002	237026700 - 237021800 237601900 - 30000216 - 1006613 196116 - 014050	REAR	767	467	24x55	24x55	10
KT27168	300069 314599	F5007	91610259 - 91610264 - 91610266 91610267 - 91610275 - 91610279 91610269 - 91610272 - 91610274	REAR	696	426	24x55	24x55	10
KT29768	170200	F5185	237028300 2376100500	REAR	655	415	24x55	24x55	11
KT43445	112923	F1113	237021400	REAR	646	406	20x55	20x55	11
KT43459	312668	F5174	2376007000 2376007001 1012386	REAR	410	281	20x78	20x68	11
KT27760	290463 - 170192 - 123840 300079 - 290467	F5075	126507007799 - 2607000 - 423016002 42301600200 - 445101010 - 445101013 - 30001002 - 300001003 - LE1160500/500/52	REAR	429	294	20x62	20x62	11
KT43444	300083		91610011 - 051075 - 9822 - M01120000 11044002 - 3753200230 - 0003200931	REAR	555	355	20x46	20x46	11
KT27761	170191 - 280508 290468 - 123779	F5020 - T5016 - F5013	10490505451 - LE1180002700/52623 - 7800 21208363 - 21224559 - 5000790689 - 840474 - 022376000500 - 2376007102 - 14134 - 2376001800 - 12486 - 2376000600 - 2376000500 - 2376000800 - 503075 - 503076	REAR	475	315	24x62	24x62	11
KT28546	312669	F5175	2376007100 - 2376007101 2376007102 - 017917	REAR	490	318	20x78	20x68	12
KT43443	310009 - 300070 290466 - 290464	F5344	99391004 - 2605100 - 21212534 F28960400 - 99020001 01070460 - M0110085	REAR	635	399			12
KT27068	312979 - 170198 - 170191 290468 - 123779	F5254	8404174 - 2376001000 - 2376001400 2376001002 - 2376001001 - 2376001500 2376002900 - 12486 - 14134	REAR	474	314	20x62	20x62	12
KT29849	314347	F5172	16508 - 1086689 1093975 - DBA912565S UR600087 - 912565	REAR	385	269	16x58	16x58	12
KT30015	314765	F5376	DBA912801 - UR600088 1008054 - 1086690 1093977 - 912801	REAR	383	267	16x82	16x58	12
KT29849	314347	F5172	16508 - 1086689 - 1093975 DBA912565S - UR600087 - 912565	REAR	385	269	16x58	16x58	12
KT30015	314765	F5376	DBA912801 - UR600088 - 1008054 1086690 - 1093977 - 912801	REAR	383	267	16x82	16x58	13
KT29850	312670	F5176	2376007200 2376007201 1021298	REAR	532	339	20x78	20x68	13
KT29860		F5164	21224778 21224989 1134526	REAR	375	273	24x57	24x57	13
KT43447	290427		M015236 128711301	REAR	422	287	20x46	20x46	13
KT29468	315152 665008 314346	F5015	Y508571 - 11048 - 508571 AM758571 - 21224745 - 9023568 - 21222271 21224331 - 21224531	REAR	428	300	24x58	24x58	13
KT29852	312977 112925	F5012	237228800 - 2376003100 - 237228802 237229200 - 2376003100 - 16271 13290 - 1079383	REAR	541	351	24x55	24x55	13
KT43448	125743 290443	F5221	4288 112297 A06030510	REAR	483	326	20x46	20x46	14
KT43450	290464 300076	F5343	449751 - 21223345 - F3041A M01121030 - 051101 - 1006604 11044001 - 354F002 - 7759	REAR	552	353			14
KT43449	130034	F5201	2500001 - 2500341 503100 - 40050	REAR	475	317	20x62	20x62	14
KT43451	290444	F5085	431806 - 12650207352 - 1518588 - 1521533 - 152786 - 1527867 23534 - 503700 - 68017 - 74405 - 905180 - BJB0180001 - M007942 - 309603030 - 3074651310 - UJC1295 - UJ40678001 - UJB 0179 - UJB 0316 - UJB 0562 - UJB0177 - UJB0177001 - UJB0179 - UJB0316 - UJB0562 - UJC0020 - UJC002001 - UJC0054 - UJ27093 - W4012762	REAR	463	311	20x46	20x46	14
KT43455		F5166	M0044020 - M0044020H M0078602 - 078602	REAR	360	263	20x55	20x55	14
KT43452			10041749	REAR	553	365	20x46	20x46	14
KT43453			21039006	REAR	366	269	24x55	24x55	15
KT43454		F5401	2376007301	REAR	460	300	20x78	20x68	15
KT29851	280498	F5084	1526855 - 431489 - 448897 - 449071 M001537 - M007950 - M076480 - M200052 M200133 - UJB0364 - UJB0563 - UJB0565	REAR	474	319	20x55	20x55	15



	SACHS		OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT28569	125442	F5224	14118 - 14750 237220400 - 2376002600	REAR	496	326	24x55	24x55	15
KT21134				REAR	469	327	20x55	20x55	15
KT21135				REAR	470	314	24x55	24x55	15
KT43456			1522341 UJC0027001	REAR	385	277	20x46	20x46	16
KT30015			D8A91 2640W	REAR	450	305	20x62	20x62	16
KT30015			D8A91 2640W - 1	REAR	450	305	20x62	20x62	16
KT43459	312668	F5174	2376007000 2376007001 1012386	REAR	410	281	20x78	20x68	16
KT28546	312669	F5175	2376007100 - 2376007101 2376007102 - 017917	REAR	490	318	20x78	20x68	16
KT29850	312670	F5176	2376007200 2376007201 1021298	REAR	532	339	20x78	20x68	16
KT27834	124638	T5372	0053266000 - 0053266400 - 0053266600 0063262400 - 0063266800 - 9583260700 0003201630	REAR	896	536	16x105	16x50	18
KT27830	124567	T1201	0063269900 - 0053260900 - 0053265700 0053265800 - 0053265900 - 0053266300 0063266700 - 9583260900	REAR	856	516	16x105	16x50	18
KT27853	124359 124361 131623	T5171 - T5414	0053261100 - 0053262500 0063266000 - 0053267400 0063260100	REAR	726	446	20x105	20x50	18
KT27825	124360	T5137	0053261200 - 0063265600 0053266800 - 0063262900 3753260000	REAR	786	475	20x105	20x50	18
KT27915	280940	T5363	0053266800 0063262900	REAR	783	473	20x105	20x50	18
KT28007	311644 311665	T5358	0053268800 - 0063260300 0063261200 - 0063261100 3753260500	REAR	705	435	20x105	20x50	18
KT27933	131739	T1273	9703260100	REAR	695	420			19
KT27510	106757	T5030	1233261500 - 0033261400 - 0043266800 0033261500 - 0043266900 - 0063266300 6173260000 - 6523200031	REAR	713	428	M16x102	20x62	19
KT27803	112026	T1151	0023261100 - 0023261300 0033268300 - 3873260000	REAR	825	465	M14x76	M14x76	19
KT43460	106948	T5099	0023267100 - 0023267200 - 0033269600 - 3813260200	REAR	713	428	M16x102	20x62	19
KT43462	123834 106951	T5074	0013269600 - 0023264800 - 0023264900 0033269500 - 0043261800 - 0063265800 3853260200	REAR	803	473	M16x102	20x62	19
KT43461	101076	T1010	3873260100 0023261200 0023261400	REAR	955	535	M14x75	M14x75	19
KT27805	310793 101410	T5034	0063265900 - 0033266200 - 0033266300 0033268500 - 0053262000 - 0033265800 0063265900	REAR	666	416	16x50	16x50	20
KT27655	310801 101939	T1009	0023268800 0023268900 0033264400	FRONT	744	454	16x50	16x50	20
KT28000	123208 290235		0063322000 0073232100 0033233600	FRONT	710	445	20x55	20x55	20
KT27847	125898 - 124358 131747 - 131056	T1207	0053239700 - 0063231600 - 0063233800 0063236500 - 0063237100 - 0063237200 3753230100 - 9583230700 - 9583231000	FRONT	855	503	16x50	16x50	20
KT27799	106746	T5225	0033264800 - 0033262500 0033262600 - 0033266000	FRONT	804	479	16x50	16x50	20
KT27921	106887 101323 131950	T1115	0043262300 - 0043262400 - 0043264300 0023265000 - 0023265500 - 0033267400 9723230100 - 9723230300	REAR	667	416	16x50	16x50	20
KT27866	106759 310791	T5129	0053264500 - 6753260000 6753260400 - 6753260600 0063267800	REAR	712	442	16x62	20x62	21
KT28082	125910 280929 313766	T1255	9703230000 - 9703231000 9703230700 - 9703230300	FRONT	690	410	14x50	14x40	21
KT27826	124376	T5256	0053261400 0063260500 3753260300	REAR	875	520	20x50	20x50	21
KT27867	310163 106865 131431	T1232	0063239500 - 0033236700 - 0033236800 0043234100 - 0043236800 - 0043236900 0053236000 - 0053236500	FRONT	805	490	16x50	16x50	21
KT27863	125912	T5178	0063268200 - 9743260000 9743260400 - 9703260400 9583260100	REAR	668	418	16x62	20x62	21
KT27943	125909 300018	T1246	9743230000 - 9743230600 - 9753230000 0073230800 - 9583230400 - 9743230400 9743231300	FRONT	736	438	14x40	14x50	21



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT27845	131622	T1304	0063235400 3753230900	FRONT	804	479	16x50	16x50	22
KT28073			9603235500	FRONT	731	441	20x55	20x55	22
KT27847	125898	T1207	0053239700 - 0063232100 0063237200 - 3753230100	FRONT	853	503	16x50	16x50	22
KT27966	310769 310807 124375	T5361 - T5360	0063238200 - 0063239700 0063233400 - 0053239900 0063238300	FRONT	732	447	20x50	20x50	22
KT27831	301805 - 124314 - 112028 310777 - 106872	T1204 - T1220	0053239500 - 0063233700 - 0063236100 0013231100 - 0023231000 - 0023231100 0023231600 - 0023235400 - 0033231000	FRONT	803	479	16x50	16x50	22
KT27798	310798 - 106869 - 106608 310772 - 106952	T1016	0043234500 - 0023235800 - 0023235900 0023269500 - 0033260200 - 0033267700 0043230000 - 0023232200 - 0023237200	FRONT	809	489	16x50	16x50	22
KT27799	310802 - 112366 - 310789 101808	T1012 - T1011	0053234000 - 0053234100 0033233200 - 0033233300 0043239200 - 0063230900	FRONT	792	486	16x50	16x50	23
KT27917	310134	F5195	9463260500	REAR	395	285	20x88	20x60	23
KT27058	101324		0023265100 0023264500	REAR	708	428	16x50	M16x75	23
KT27938	106592	T5081	0033265100 0023260200 0012364100	REAR	665	415	20x50	20x50	23
KT43465	106220	T1195	0033262100 - 0033262200 - 0033264200 0043264700 - 6203260000 - 6453200031 6453260000	FRONT	825	465	M14x76	M14x76	23
KT43466	106742	T5130	0033263000 0033262900	REAR	685	430	20x62	20x62	23
KT43467	106875		0033263800 0033263900 0043260200	FRONT	660	410	16x50	16x50	24
KT43468	605002 106950	T5090	0013264600 - 0023261000 0033269900 - 3453267500	REAR	900	540	20x62	20x62	24
KT43469	606103 106949	T5039	0013263200 - 0013264500 - 0013267400 0013267500 - 0013268500 - 0033269800 3453267700	REAR	790	478	20x62	20x62	24
KT27846	124678 131185	T1220	0063237300 - 0033232000 - 0033232100 0043235600 - 0053239600 - 0073231400 3753230600 - 9583230800 - 9583230900	FRONT	804	479	16x50	16x50	24
KT28008	311668	T5453	0063261000 0053269800 0053266900	REAR	684	424	20x105	20x50	24
KT27829	125908	T1200	0053263300 0053263400	REAR	765	465	16x105	16x50	24
KT43470			3753200330 9603200430 10041308	REAR	470	315	24x55	24x55	25
KT34853	290995	CB0097	3758900519 - 9408903919 - 9408904119 9583172103 - 3758900419 - 3758900919 9583171003 - 9583171103	REAR	371	303	12x50	12x50	25
KT34864	131850	CB0100	9428902819 9428902219	FRONT	340	241	14x40	25x40	25
KT34871	290996	CB0163	3758900819 - 9408904519 9408904619 - 9583171503	FRONT	350	246	14x50	14x40	25
KT28027			9408903119	REAR	341	238	14x40	14x40	25
KT34866	313946 - 290248 - 290249 313947 - 290259	CB0121	9438900119 - 9428905519 - 9428905619 9438900219 - 9428905119 - 9428905019 9428904919 - 3758900819 - 9408904519 9408904619 - 9583171503	FRONT	345	246	14x50	25x40	25
KT34851	313949 290251	CB0150	3758901119 - 3758900419 - 3758900919 9408903819 - 9408904719 - 9583171003 9583171103 - 9583170003 - 3753170003	REAR	331	246	14x50	14x50	26
KT34809	101378 101456 313424	CB0071	0008912205 0008911805 0008911905	REAR+FRONT	259	192	18x33	18x33	26
KT31851	290247 313945 131851	CB0158	9428904019 - 9428901619 - 9428901719 9428903619 - 9438901019 - 9438901119 9438901619 - 9438901719	REAR	315	242	14x40	14x40	26
KT34852	131275	CB0096	9428904719	REAR	371	303	12x40	12x32	26
KT43471			3758900119 9408901719	REAR	278	220			26
KT34966	135066		9408900919 - 9408900819 9408901319 - 9408901519 9523170403	REAR	297	212			26
KT34915	312649	CB0164	9438905019	REAR	229	211			27
KT43472	135180		9703170103 - 9703173003 9703173103 - 9703173203 9703175003	REAR	325	286			27
KT34863	290245 313942	CB0147	9438901219 - 9428900419 9428901519 - 9438902419 9428903819	REAR	369	330	14x40		27



	SACHS		OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT34810	101329	CB0104	3818900719 - 3818900919 3878901019 - 3878901319 3878901619	REAR	290	250	M12x84		27
KT34866	313948 290250	CB0122	9428905419 9438900319	FRONT	346	251	14x50	25x38	27
KT34859	313763 105423	CB0101	9438900919 - 9428902319 9428903119 - 9438900819 9438901419 - 9438901519	REAR	320	250	14x40	14x40	27
KT34912	313952	CB0161	9438902919 9438903019	REAR	322	284	14x50	14x50	28
KT34808	195422	CB0057	0008910205 - 0008910305 - 0008900505 0008911005 - 0013231900 - 0008910805 0008911005	FRONT	389	251	12x32	12x32	28
KT34951	131676		9583170503 9703171703 9703174103	FRONT	301	275	25x50	14x45	28
KT43474	311888		9583170303 9703173903 9703172903	REAR					28
KT34901	312648 313955 316700	CB0155	9438903519 9438903419	REAR	330	288			28
KT34950			9583170603 9703174203 9703171803	FRONT					28
KT43475	312647 313954 316699	CB0156	9438903219 9438903119	REAR	330	282	14x50	14x50	29
KT34821	125178		6208900219	REAR					29
KT34900	290246 313943 316687	CB0165	9428901119 - 9428903519 9438900519 - 9438902319	REAR	368				29
KT34917	312651 313957 316702	CB0218	9438904619 9438904919	REAR	303				29
KT34549			3753170003 9583170003	REAR	233	187	12x45	12x45	29
KT43476			3758900719 9408901119	REAR	278	220			29
KT34913	312646 313953 316698	CB0157 -CB0155	9438903319 9438903419	REAR	323	281			30
KT34863	290257 313944	CB0144	9428903919 9438901319	REAR	369	330	14x40		30
KT34957	312650 313956 316703	CB0217	9438904419	REAR					30
KT34857	313941 290268	CB0148	9428900519 9583170703 3758900019	FRONT	211	166	12x32	12x32	30
KT35027	317516	CB0259	9603109255 9603106955 9613101255	REAR					30
KT28023	316704	CB0251	9603107555 9603100755 9613101555	FRONT	360	281			30
KT34860	105392 - 313676 731700002549 731700002555	CB0107 CB0089	9428900119 9428906919 9428902919	FRONT	346	275	14x40	25x40	31
KT34861	105409 290997 311189	CB0090	9428900219 - 9428906019 A9428900219H-887-H88 - 9438903919	REAR	315	240	14x40	14x40	31
KT34862	311663 105414 290998	CB0115	9428905319 - 9428905919 9438903819 - 6628900119	FRONT	355	250	14x50	25x40	31
KT34902	311664 - 73170001830 731700000920 731700000691	CB0116	9428906119	REAR	320	245	14x50	14x50	31
KT34869	105408	CB0108	9428905219 9428907019	FRONT	350	250	14x50	25x40	31
KT34916	315153	CB0236	9408904919	FRONT	345	245	14x50	14x40	31
KT27057	101161		3643207031 - 3026260000 0013262000 - 0023262000	REAR	773	460	16x50	M16X1,5 Diş	32
KT43477	101467	B5347	53263500	REAR	605	360	M16x83	M16x83	32
KT27889	106893 - 101236 101164 - 101163 106161	B1327 B1263	0023262300 - 3023260300 - 0013260800 0013262800 - 0023238000 - 0023262500 0033237400 - 0023264100 - 0013262200	REAR	604	359	M14x69	M14x70	32
KT43478	106795 - 101158 112422 - 106646 310792	B1259	0023234200 - 0033263600 - 0053231400 3733200230 - 0043235800 - 0063237500 3573260100 - 3963200030 - 0023236500	FRONT	604	359	M14x69	M14x70	32
KT27918			3563230200 3563230400 3563230500	FRONT	664	435	20x62	20x62	32
KT27285			3563200031 - 3563260000 3563260700 - 6133260100	REAR	613	373	M14x67	M14x67	32



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT27285			6293260100 6293260000	REAR	617	379	M14x67	M14x67	33
KT27367	311480 311894	T1321	81437026011 81437026076 81437026012	FRONT	699	429	20x105	24x55	36
KT27499	112853	T5044	81437016564 - 81437016584 81437016620 - 81437016585	REAR	651	419	20x62	30x62	36
KT27258	131696 315151	T5263	81437016905 81437026100 0083654	REAR	678	428	20x62	30x62	36
KT29904	280928	T5261	81437016904 81437026099	REAR	772	473	20x62	30x62	36
KT29961	310626	T5275	81437016908 81437026037	REAR	768	473	20x62	30x62	36
KT29872	310627 280931	T5276	81437026119 - 81437016911 81437026118 - 81437016912	REAR	893	533	20x62	20x62	36
KT43479	112854	T5047	81437016568 - 81437016605	REAR	752	462	20x62	20x62	37
KT43480	300001	T5350	81437016934 81437026148 81437026016	REAR	740	455	20x62	20x62	37
KT29905	280938	T5277	81437016926	REAR	668	418	20x62	20x62	37
KT27393	314936	T1349	81437026079	FRONT	870	538	20x105	24x55	37
KT29879	112929	T1037 -T1185 -	81437016750 81437016766 81437016751	FRONT	645	385	M14x78	16x50	37
KT29834	311479	T1308	81437026005 - 81437026014 81437026078 - 81437026086 81437026004	FRONT	870	540	20x105	24x55	37
KT27059	124610 106469	T1184	81437016782 - 81437016820 81437016456 - 81437016338 81437016452 - 81437016932	REAR	658	403	12x80	14x45	38
KT29825	131750 280930	T1266	81437016902 81437016964	FRONT	675	405	M14x76	24x55	38
KT29874	112869	T1028	81437016490 - 81437016491 81437016456 - 81437016444 81437016442	FRONT	676	405	M14x78	16x50	38
KT29833	312859 311478	T1320	81437026003 - 81437026002 81437026077 - 81437026085	FRONT	715	434	20x105	24x55	38
KT29836	314336	T1333	81437026058	FRONT	665	429	20x105	24x55	38
KT29449	106284		81437016418 - 81437016679 81437016734 - 81437016405 81437016677	REAR+FRONT	772	472	20x62		38
KT30017	311488 315287	T1347	81437016983 - 81437016990 81437016992 - 81437026015 81437026080 - 81437026084	FRONT	770	460	16x50	24x55	39
KT29880	101383	T5037	81437016178 - 81437016364 - 81437016405 81437016178 - 81437016579 - 81437016418 81437016364 - 81437016679 - 81437016417	REAR+FRONT	772	472	22x62		39
KT30222	101345 101778 101122	T5069	81437016149 - 81437016174 - 81437016195 81437016206 - 81437016218 - 81437016220 81437016244 - 81437016528 - 81437016287	REAR	552	342	M14x72	M14x72	39
KT29773	112859	T1093	81437016597 - 81437016598 81437016600 - 81437016612 81437016632 - 81437016633	FRONT	697	407	M14x67	M14x67	39
KT30164	131256 125857	T1190	81437016888 81437016794	FRONT	682	417	M14x67	16x50	39
KT27540	125148 125963	T1189	81437016793 81437016804	FRONT	647	385	M14x67	16x50	39
KT29863	125512 - 106096 106145 - 101993	T1142	81437016781 - 81437016789 - 81437016821 81437016864 - 81437016349 - 81437016365 81437016392 - 81437016410 - 81437016665	FRONT	617	358	M12x69	M12x69	40
KT29030	112325 112881	T1090	81437016492 - 81437016493 81437016616 - 81437016619 81437016707	REAR	683	393	M14x67	M16x65	40
KT43481	101985	T5056	81437016346 - 81437016258 - 81437016345 81437016186 - 81437016134 - 81437016132 81437016150 - 81437016128 - 81437016097	FRONT	703	433	16x50	16x50	40
KT43482	101392 - 106289 101706 - 106285 131062	T5049 - T5036 - T5135	81437016177 - 81437016406 - 81437016142 81437016138 - 81437016419 - 81437016680 81437016679 - 81437016580 - 81437016658	REAR	672	422	20x62		40
KT29972	311895	T1313	81437026000	REAR	595	380	16x50	16x50	40
KT43483	315006	T5432	81437026071	REAR	809	498	20x62	20x62	40
KT43484	310629	T5262	81437026117 81437016950	REAR	572	373	20x62	30x62	41
KT43485			81437026059	FRONT					41



	SACHS		OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT34642	312836	CB0197	81417226061	REAR	345	287	12x45	12x50	41
KT27514	105843		81417226031 81417226044 81417226047	FRONT	312	226	14x45	M12x65	41
KT27086	112211 112884 112855	CB0106	81417226014 - 81417226016 - 81417226050 81417226038 - 81417226042 - 81417226009 81417226012 - 81417226033 - 81417226037	FRONT	314	252	14x45	M10x69	41
KT34640	105844		81417226032 81417226046	REAR	296	223	14x40	14x40	41
KT34644	290977 290975	CB0199	85417226010 85417226017	FRONT	379	282	12x50	12x50	42
KT34648	316729	CB0200	81417226068	FRONT					42
KT34649	290978 290976	CB0198	81417226059 85417226019 85417226011	REAR	345	244	12x45	12x50	42
KT27520	112212 112885 112855	CB0105	81417226015 - 81417226010 - 81417226013 81417226017 - 81417226045 134641650 - 4426628	REAR	292	246	14x40	14x40	42
KT34641	312835	CB0201	81417226060	FRONT	379	318	12x50	12x50	42
KT34652	317926 - 290975 290977 - 312835 316729		81417226085 81417226086 81417226087	FRONT	382	322	12x50	12x50	42
KT27524	135194 135196 313181		85417226008 - 85417226022 85417226014 - 81417226077	FRONT	380	285	12x50	12x50	43
KT34637	135199 135200 313184		85417226007 - 81417226076 85417226013 - 81417226058 85417226024	REAR	339	242	12x45	12x50	43
KT34638	300013 - 313077 - 300014 235003 - 731700001686 731700003505		81417226053 - 81417226069 - 81417226070 81417226071 - 81417226072 - 81417226054 81417226066 - 81417226067 - 81417226082	FRONT	373	280	12x50	12x50	43
KT34637	135200 313184		81417226076 - 81417226058 85417226024 - 85417226013 85417226007	REAR	339	242	12x45	12x50	43
KT34635	105855	CB0092	81417226048 81417226051	FRONT	315	223	14x45	M12x65	43
KT27523	105856	CB0091	81417226049 81417226052 81417226028	REAR	290	240	14x40	14x40	43
KT34633	135198 - 313198 - 135176 30001 - 313078 - 300015 313183 - 731700235005 731700004110 - 72100105388		81417226057 - 81417226075 85417226006 - 85417226012 81417226055 - 81417226073	REAR	340	240	12x45	12x50	44
KT27524	135197 135195 313182	CB0112	85417226009 - 85417226015 85417226023 - 81417226078 81417226024 - 81417226092	FRONT	377	279	12x50	12x50	44
KT34634	313080 300017		81417226074 81417226056 81417226083	REAR	340	245	12x45	12x50	44
KT43486	106148		81437016230 - 81437016409 - 81437016393 81437016321 - 81437016316 81437016166 - 81437016162	REAR+FRONT	526	325	M16X1,5 DiŞ	M16X1,5 DiŞ	44
KT43487	106885	B5260	81437016578 81437016450 81437016573	REAR	689	389	M16X1,5 DiŞ	M16X1,5 DiŞ	44
KT43488	101892 - 131058 112879 - 106010 106884	B5259	81437016266 - 81437016318 - 81437016324 81437016325 - 81437016539 - 81437016538 81437016542 - 81437016543 - 81437016606	REAR+FRONT	526	325	M16X1,5 DiŞ	M16X1,5 DiŞ	44
KT30222	106009		81437016330 81437016334	REAR					45
KT43489	101894 101893 106002		81437016163 - 81437016167 - 81437016217 81437016219 - 81437016232 - 81437016234 81437016319 - 81437016320 - 81437016323	FRONT	599	368	M16X1,5 DiŞ	M16X1,5 DiŞ	45
KT30053		B1278	81437016706 - 81437016730 - 81437016768 81437016801 - 81437016806 - 81437016811 81437016832 - 81437016861 - 81437016893	REAR	488	309	M14x75	M14x75	45
KT29856			81437016785 - 81437016855 81437016856 - 81437016923 81437016940 - 81437026008	FRONT	504	309	M16x78	M16x78	45
KT43490	290475	T5078	5000452433 - 5010137052 5001863291 - 5010237285	REAR	679	419	20x45	20x45	48
KT28876	311762 131152 311828	T5258	7482293227 - 5010294908 - 5010294909 5010383685 - 5010239642 - 5010294528 5010383686 - 5010557326 - 7482293198	REAR	880	522	20x55	20x62	48
KT28876	312372	T5147	5010380547 - 5010383687 5010383686 - 5010239667 5010239642	REAR	756	463	20x55	20x62	48
KT28883	311876	T1294	5010630133 - 7420900190 - 20806289	FRONT	715	431	20x50	20x50	48
KT28868	312718 131184	T5154	5010600393 - 5010630386 5010294158 - 5010383689 5010557482	REAR	860	515	20x55	20x62	48
KT28880	312716	T5282	5010630728 21251382 20726482	REAR	865	520	20x55	20x62	48
KT28862	313213 313214	V2099	5010383498 5010488147 5010600336	FRONT	701	468	M12x60	20x45	49



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT28861	310962 - 290476 131047 - 314899 131028	T5179 - T1223	5010383692 - 5010557487 - 5000752729 5010052920 - 5010294412 - 5010294413 5010383049 - 5010383050 - 5010383693	FRONT	627	336	M14x67	M14x67	49
KT29088		T5392	7421909816 - 7421243060 21243048 - 21862164 21909816	REAR	770	450	16x100	M16x1,50 Diş	49
KT43519	290473 313491 314897	V2103	5000452402 - 5000452402 -5000453922 - 5001857660 - 5010238077 -5010294760 - 5010348438 - 5010488157 - 5010488160	REAR	675	418	20x45	M12x85	49
KT35316		CB0063	5010460244 - 5010629761 25379081 - 20578877	FRONT	227	190	14x45	14x45	49
KT35468		CB0064	5010552010 5010629471 25379070	REAR	241	210	12x42	12x42	49
KT35466	135050	CB0046	5010460113 - 5010615880 7420840318 - 5010269605 20721849 - 20840318	FRONT	265	210	14x45	14x45	50
KT34466	124737	CB0051	5010052405 - 5010130535 5000741014 - 5010460114	REAR	292	202	M10x60	M10x60	50
KT34467	124735	CB0052	5000741013 - 5010137139 5010130534 - 5010052404 5010460115	FRONT	368	247	12x47	M14x61	50
KT35465	310956 124734 110677	CB0069	5010065309 - 5010065311 5010130609 - 5000787974	REAR	298	232	12x47	12x47	50
KT34463	124736		5010130413 5010130608	FRONT	261	201	M10x62	30x40	50
KT35462	313070 313069	CB0109	5010460318 - 5010532897 5010629397 - 20593746	REAR					50
KT35473		CB0131	5010532895 - 7482052897 20721512 - 82052897	REAR					51
KT35472		CB0133	7482039600	FRONT	265	210			51
KT35471	310955 - 131040	CB0110	5010316210 5010316560	REAR	311	228	12x40	12x40	51
KT34779	313072 - 25376537 781700002201 781700001622 781700004038	CB0171	5010615879	REAR					51
KT35188	310957 131041	CB0088	5010228908 - 5010228908A 5010316783A - 5010316783 5010269674	REAR	310	224	12x40	12x40	51
KT34778		CB0070	5010228849	REAR	341	257		M14x77	51
KT34780		CB0118	5010552241 - 7420898055 7482052893 - 20898055	REAR	275	191		m14x73	52
KT35126		CB0210	7421170696 21430900	FRONT					52
KT35474		CB0240	7421821030 7421171977	REAR	383	291			52
KT28994	310783 - 125650 314924 - 123901 125998	T1319 T1330 T1145	1370267 - 1968263 1867874 - 1315959	FRONT	690	410	M14x67	22x46	54
KT28994	310784 125597 112890	T1101	1370267 - 1356723 1388417 - 1110588 395063 - 111056	FRONT	690	410	M14x61	22x50	54
KT28639	310786 125599	T5144	1370093 - 1380425 1397523 - 1478507 - 1519631	REAR	950	555	20x50	20x50	54
KT30014	314738	T5391	1854537	REAR	948	555	16x100	20x50	54
KT30124	125598	T1215	1371447 - 1371448 1478499 - 1478500 - 1861120	FRONT	869	500	M14x63	16x50	54
KT29920	290993	T1296	1427423 - 2031227 1427424 - 2031228	REAR	800	475	16x100	20x50	54
KT30155	315275	T5439	1547113	FRONT	685	408			55
KT29971	311892 125598	T1215	1438392 - 1438527 - 1478540 1478541 - 1371447 - 1371448 1478499 - 1478500 - 1861120	FRONT	847	487	M14x60	20x50	55
KT30020	315592		1923370	FRONT	687	410			55
KT30056	310773 123204 125511	T5059	1303235 - 1307332 - 1323476 1340251 - 1353371 - 1377056 1379478 - 1478502	REAR	834	484	M16x63	20x50	55
KT27641	290011	T5242 T5104	1381808 - 1397525 - 1110589 - 1479901 1519634 - 1340253 - 1012046 - 258420 263496 - 366426 - 395064	REAR+FRONT	608	368	M16x63	M14x65	55
KT27018	125600	T5243	1340254 - 1353105 - 1381809 - 1012162 - 1303235 1307332 - 1309129 - 1323476 - 1340251 - 1353371 1377056 - 1379487 - 1478502 - 323476 350254 - 377056 - 381809 - 272400	REAR	820	480	M16x64	22x50	55
KT43492	310797 - 125997 106763 - 131266	T1101 - T1147 T5241 - T1331	20900141 - 1314479 - 1381807 - 1421062 186118 - 1868265 - 1012044 - 1340252 279011 - 307111 - 424306	FRONT	685	407	M16x65	22x50	56



KLÖTZE TECH	SACHS		OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT27571	112889	T1044	1110589 - 1012046 - 1340253 - 1381808 1397525 - 1479901 - 1519634 - 258420 263496 - 366426 - 395064	REAR	630	370	M14x67	M14x70	56
KT43493	112209	T1105	1110531 1309129	REAR	834	484	M14x61	22x50	56
KT29888	125998	T1323 T1332	186117 1420474 1868264	FRONT	690	410	M14x61	22x50	56
KT29848	000331	T1230	1390898 - 1478501 1376430 - 1390898 1478501	FRONT	735	430	M14x64	20x50	56
KT29862	131475	T5145	1365211 - 1380424 1478506 - 1519630	REAR	870	523	20x50	20x50	56
KT30016	315276	T1361	2031229 1497641	REAR	890	578			57
KT27570		T1146	112262 - 1354966 - 395063 - 2090041 - 307055 - 111056 - 20900048 - 1327211 - 279011 - 1012045 - 133959 - 20900049 - 307111 - 20900040 - 20900145 - 1110588 - 1012044 - 1340252 269692 1314479 - 1012097 - 1012061 - 1012009 - 1381807	FRONT	738	440	M16x72	22x46	57
KT36035		CB0078 CB0079	1502470 - 1502471 - 1502472 1502474 - 1505563 1595642 - 1495642	REAR	337	240	12x93	14x50	57
KT35950	105875 - 105876 112320 - 105845 105831	CB0065 CB0014 CB0060	1348119 - 1340581 - 1348120 370227 - 393257 - S50365 1116535 - 1117320 - 1117334	REAR+FRONT	329	229	12x45	14x50	57
KT35813	310620	CB0134	1495642 1505563 1595642	REAR	337	240	12x93	14x50	57
KT35185	105873 290989	CB0059	1349840 - 1349844 - 1382826 1382827 - 1382829 - 1424229	REAR	308	211	12x93	16x25	57
KT35871	290201 290203	CB0010	1381904 - 1397396 1397400 - 1435859	FRONT	312	210	12x93	12x25	58
KT36033	290202 290204 290205	CB0009	1381906 - 1397398 - 1402271 1397394 - 1435856	REAR	312	210	12x93	16x25	58
KT35874	105872 290998	CB0058	1424228 1363122	FRONT	308	211	12x93	12x25	58
KT36030	105871 290987	CB0058 - CB0011	1363120 - 1397386 - 1397388 1397390 - 1397392 - 1424227	FRONT	308	211	12x93	12x25	58
KT30153	313804 313805	CB0176	1943267 - 2023668 1466184 - 1466185 1943268	FRONT	310	210	12x90	12x25	58
KT30151	315349	CB0177	1761373 1741736	REAR	340	236	M12	14x50	58
KT35991	317589	CB0178	1731203 - 1761372 - 2074020 1731204 - 1761374 - 1761375 - 1761376	REAR	340	236	M12	14x50	59
KT35811		CB0182	1910106	REAR	328	230			59
KT36090			1871657 - 1923649 1105301 - 1871615	FRONT	380	281			59
KT30011	314348		1766441 - 2023667 2023668 - 2023666	FRONT	309	204			59
KT30032	317450		2074003	REAR					59
KT35874	290988 - 557001+105871 557001+105872 557001+290201 557001+290203	CB0058	1363122 1424228	FRONT	304	212	M12x88	M12x25	59
KT35319		CB0009+CB0030 CB0173	1435856 - 1397398 - 1381906 1402271 - 1397394	REAR	303	204	M12x93	M12x25	60
KT34534	481002 - 105845 105846 - 105875 105876	CB0066+CB0065 CB0066+CB0060	370227 - 393257 - 550365 - 1116535 - 1117320 1117334 - 1331620 - 1331621 - 1331634 - 1331635 1348117 - 1348118 - 1348119 - 1348120 - 1340581	REAR+FRONT	332	240	M12x40	14x50	60
KT35871	290203	CB0172 - CB0030 CB0010	1381904+1381919 - 1381904+1476415 1397400+1381919 - 1397400+1476415 1435859+1381919	FRONT	312	216	M12x87	12x25	60
KT36029	557001 + 105873 557001 + 290989	CB0059	1349844 - 1382826 1382827 - 1424229 1349844	REAR	305	207			60
KT35335		CB0074 717262778	1870893 - 1502470 1502472 - 1502474	REAR	330	230	M12x93	14x50	60
KT36035	310619 + 310620		1502474 - 1595642 - 1495642 1502473 - 1505563 - 1502470 1502471 - 1502472	REAR+FRONT	330	230	M12x93	14x50	60
KT36030	310619 + 290987		1424227 - 1363120 - 1397386 1397388 - 1397390 - 1397392	FRONT	303	204	M12x93	M12x25	61
KT36029	105873 290989 557001	CB0058 CB0067	1382827 - 1424229 - 1349844 1372826 - 1372829 - 1349840	REAR	312	216	M12x87	M16x25	61
KT36030	312465+290987 312465+105871		1424227 - 1363120 - 1397396 1397390 - 1397392 - 1397386 1397388 - 1431745 - 1431746 - 1431747	FRONT	303	204	M12x93	M12x25	61
KT36022	1802567 + 1923649		1923645 - 1870615 - 1871657 - E105301						61



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT35817	1907301+ 1910106	CB0194	1873668	REAR	405	287			61
KT35334	1926779 + 1908098	CB0184	1908097 - 1908098 2493165 - 1926779	FRONT					61
KT27621	106741 - 131067 112900 - 106749	B5290	470273 - 475915 - 481967 - 429163 - 426218 415848 - 406694 - 409720 - 410554	FRONT	600	363	M16x84	M20x90	62
KT28557	106976 - 124879 - 131692 131158 - 131426 - 112277	T5052	1283723 - 296305 - 1205672 1283726 - 1327883 - 92968	FRONT	630	380	M16x70	20x50	64
KT27258	124874 - 131427 - 112145	T5045	252620 - 1282623 - 1328748 360585 - 740021 - 755262	REAR	672	417	20x62	30x62	64
KT27258	112002 - 112145 124874 - 131080 - 131427	T5046	1283732 - 222773	REAR	695	434	20x62	30x62	64
KT28562	290980 290983 290979	T5183 T5227	1398694 - 1696290 - 1944417 - 1849370 1942781 - 1382703 - 1427903 - 1618606 1696291 - 1944417 - 1944418	FRONT	695	403	M16x70	M16x70	64
KT28561	290981 280927 290982	T5180	1369711 1443695 1606742	REAR	669	419	20x62	20x50	64
KT27492	106977	T5070	1283729 379131	REAR	840	480	M16x70	M16x70	64
KT28582	310616	V2140	1407073	REAR	598	348	M14x70	M14x70	65
KT28550	311504	T5357	1610800 1440457	REAR	560	380	20x62	20x50	65
KT43497		T5182	1443696 1606743 1649947	REAR	670	420	20x62	20x50	65
KT28585	300026	V2141	1706888 - 1707348 1407069 - AFRE002	FRONT	613	363	M14x70	M14x70	65
KT28581	106975		1283730 - 379132	REAR	769	448	M16x70	22x50	65
KT43498	106295	T5123	0677975 - 282309 - 290230 677975 - 0512582 - 0290230 - 0290926 0296466 - 0677975 - 0500010 - 0028230	REAR	670	420			65
KT43499	106424		0282309	REAR	672	422	20x50	20x50	66
KT27488	101755	T5142	505464 - 1273854 - 1283733 - 1283735 1283743 - 373838 - 378225 - 505065 617739 - 655776 - 98923	REAR	633	369	M16x70	M16x70	66
KT27493	106027	T5211	106764	REAR	787	462	M16x71		66
KT27045	106345	T5101	271075 117562	FRONT	688	418	M16x71	25x50	66
KT43500	112053		1283736 648376 220543	REAR	825	485	20x55	M16x74	66
KT35221	312781 315586	CB0049	1319673 - 1387326 1623465 - 1792422 1817663	REAR	278	208	14x45	M14x70	66
KT35220	312780 315587	CB0044	1319672 - 1337159 1387327 - 1623464	FRONT	332	262	25x45	M14x70	67
KT34547		CB0048	1265275 1265277 375222	REAR	278	208	14x45	M14x70	67
KT43501		CB0186 CB0012 CB0043	762784 - 375221 - 1377827 1818918 - 1265276	FRONT	332	262	25x45	M14x70	67
KT35224	312779	CB0045	1265272 - 1377828 1792420 - 1230942	REAR	284	243	14x40	M14x80	67
KT35223	312778	CB0032 CB0187	1260941 - 1265271 1377825 - 1818916	FRONT	332	262	25x45	M14x70	67
KT35222		CB0042	1303516 1436055	REAR	246	200	14x40	14x40	67
KT35227		CB0047	1380606 1436060 1609020	REAR	225	177	14x40	14x40	68
KT35228		CB0013	1377826 1451155 1792419	REAR					68
KT35234		CB0125	1407081 - 1403390 - 1405892 1703588 - AFRE013 - AFRU075	REAR					68
KT43502		CB0124	1407079 - 1403404 1405470 - AFRE011						68
KT34548		CB0033	1265281 - 1285393 - 1321590 1353450 - 1353453 - 1371065 1444147 - 1622211 - 375224	FRONT	320	275	25x40	M14x80	68
KT35225		CB0034	1265282 - 1285394 - 1321591 1353451 - 1353454 - 1371066 - 1623477 299862 - 1792421 - 1792423	REAR	280	235	14x40	M14x80	68



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT29498	125648	T1178	1629485 3987958	FRONT	715	450	16x100	16x66	70
KT27686	131595 310774 124247	T1177 T1023	20374545 - 20900497 1076717 - 1629478 3987957	FRONT	715	450	16x100	16x66	70
KT29725	310785 123899	T5098	1628103 1629482 1629483	REAR	815	475	16x100	M16x80	70
KT29639	311657 131693	T5177	20585555 - 21172388 20374544 - 1079150	REAR	774	470	16x100	20x50	70
KT29725	124601	T5097	1628136 1628103 1629483	REAR	799	484	16x100	M16x81	70
KT29027	125646	T5096	1629477	REAR	705	410	M16x80	M16x80	70
KT28878	125649	T5091	7420583421 1629405	REAR	715	425	16x100	M16x80	71
KT29638	311656 131695	T5170 -T5371	7420374543 -7420854448 20585555 - 21172387 1079151 -20374543	REAR	833	498	16x100	20x50	71
KT29494	112130 - 310787 - 112125 106786 - 112123	T1005	1599623 -1609553 -1609555 1610920 -1610921 -1613248	REAR	655	415	16x100	16x66	71
KT27029	300009	T5395	20374547	FRONT	715	443	16x66	16x66	71
KT28870	312710	T1272	20804285 -20906906 5010630702 - 7420867988	FRONT	668	408	20x50	20x50	71
KT29505	312706 131296	T1149	1094523 - 8159833 20532767 - 20769819	FRONT	725	450	16x100	16x66	71
KT29632	124915	T1176	1628189 -1629480 1691617 - 3987960	REAR	781	481	16x100	20x50	72
KT28714	112127	T5066 T5094	1598105 1609005	REAR	837	497	16x50	M16x81	72
KT29626	112128	T5155	1598106	REAR	842	512	20x50	20x50	72
KT29627	124248 112124	T5110	1628359 -1629993 21127043 - 1612217	REAR	732	442	16x100	M16x81	72
KT29531	131694	T5184	20374546 -20374549 1629485 -3987958	FRONT	720	444	16x100	16x66	72
KT29624	112126	T5093	1605163	REAR	799	484	16x50	M16x81	72
KT28712	125510	T5367	1609002 -1609001 20766061 -21232661	FRONT	880	530	16x100	20x50	73
KT29499	125647	T1179	1629920 1629481 3987961	FRONT	883	528	16x100	20x50	73
KT29532	300006	T1180 T1276	20367750 3987959 1629475	FRONT	714	452	16x100	20x50	73
KT29539	131270		1629992 3171962 20374548	FRONT	720	450	16x100	16x66	73
KT35469	312273	CB0025	5000356647 -5010277261 5010559508 - 15764443 1585586 -1622085	FRONT	242	185	14x32	14x32	73
KT35716	290491 315583	CB0028	1629722	FRONT	428	299	14x45	20x45	73
KT35719	312694	CB0004 CB0005	1076860 -1075445 - 3172986 3198859 -20721166 20960913 - 21137458	REAR	412	330	14x45	14x45	74
KT34734	312695	CB0040	21111925 3198836	FRONT	335	225	12x40	M14x67	74
KT35718	290493 315581	CB0007	1622227 3198849 3986315	REAR	254	209	20x45	20x45	74
KT35717	290489 315499 315582	CB0029	1629721	REAR	402	310	14x45	14x45	74
KT43503	312395	CB0026	1599459 1622086 6794392	REAR+FRONT	242	185	14x32	14x32	74
KT35713	313834	CB0021	1580389	REAR	335	265	14x32	14x32	74
KT35782		CB0211	21171973	REAR					75
KT27091		CB0208	21171975 22128971	REAR	194	174	M12x1,75	14	75
KT35781		CB0204	21168663	REAR	256	235	20x45	20x45	75



KLÖTZE TECH	SACHS	MONROE	OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT29545		CB0175	21739593 22040665	REAR					75
KT35783		CB0209	21430905	REAR	226	202			75
KT29734		CB0205 -CB0206	21170510 21739591 22040653	FRONT					75
KT34733		CB0008	1075478	FRONT	326	218	M10x57	20x45	76
KT35738	316373	CB0006	1076855 - 20427897 - 20721169 - 20775212 20889134 - 20721167 - 20736464 - 20889138 21032337 - 21651231 - 3172 985 3198 850 - 22144200	REAR	410	355	14x45	14x45	76
KT34731		CB0003	3172984 1629719 1629724	FRONT	430	290	14x45	20x45	76
KT35735		CB0039 + CB0055	20453258 20889132 -1	FRONT	384	272			76
KT41851		CB0214	21111932-1 20889136	FRONT	384	272			76
KT34732		CB0002	1075076 1075077	REAR	405	345	14x45	14x45	76
KT29576		CB0207	21170611 22040662	FRONT					77
KT35735		CB0212	20453258 - 20889136 21111942 - 3198837	FRONT	384	272			77
KT35474		CB0215	21880100	REAR	383	291			77
KT35784		CB0213	21171976 22040666	REAR	379	334			77
KT43505	106559		1190741 1130539 365377	REAR	610	370	14x70	14x67	77
KT29497	125756 131029 280932	B1343 -B5296 -B1280	3037213 -3178737 -3036106 3027423 -3027113 -3178738 20540056 -20543860 -20568804	FRONT	703	438	16x100	20x50	77
KT29631	112119		1136644 1134749	REAR	655	415	16x100	16x66	78
KT43506	106889 - 123451 312557 - 314978	B5339	1136643 -1134748 1137026 - 1137027 20385020 -3159800	REAR+FRONT	644	410	28x100	28x66	78
KT27630	131377 310049	T5269	41033039 - 41214461 41214700 - 41225418 41296211 - 41296216	REAR	652	402	20x55	20x55	80
KT29360	131907 312378	V2516	500367642 - 500369632 - 504043717 504043883 - 504088408 - 504152176 504088409 - 5801345775 - 93828951	FRONT	433	283	16x38	16x38	80
KT43507	000369 131909	V2515	500305418 - 500337443 - 500367032 500368636 - 500369631 - 500377620 93828781 - 2997265 - 4854829	REAR	575	352	16x38	16x38	80
KT29349	131948	T5267	41033239 41296758 500320015	REAR	820	500	24x55	24x55	80
KT29338	131621	T1261	41033038 41214460 41214818	FRONT	754	434	M14x70	16x50	80
KT43508	300077 314600	T1130	42052982 4697041	FRONT	759	453	20x46	20x46	80
KT29346	112498 125401	V2108	98408701 -98411159 99451732 - 98415100 99451740	REAR	669	404	16x38	16x38	81
KT29385	112554	V2104 -V2137	98408700 -98411160 99451729 - 504063455 504148139	FRONT	618	381	16x38	16x38	81
KT29339	124856	T5274	99474639 98488107 99432314	REAR	652	402	20x55	20x55	81
KT29342	131625 124864 124865	T1137	41032334 -41218439 -41218445 - 41218447 98414529 -98414535 - 98430150 -98432435 99474644 -99474655	FRONT	754	439	M14x67	16x50	81
KT29358	125935	T1128	98447153 98482579 99465084	FRONT	714	414	M14x67	20X46	81
KT29357	280923 125941	T1243	98436446 -98438405 98445195 - 99431723 - 99473749 99485542 - 99465087	REAR	674	404	M14x67	20X46	81
KT29367	125938	T1244	98408707 -98411167 -98482154 - 99465079 4859825 -504148145 -98408706 -98408709 98411172 -98415096 -98419046 -98445162 99465078 -99465081 -99465082	FRONT	686	407	M14x67	20X46	82
KT27081	125939	T1265	41006921 -41218440 41296756 - 99474646 33139100	FRONT	492	322	16x50	16x50	82
KT43509	125402		41005022 41218444 99474657	FRONT	778	448	M14x67	16x50	82
KT43510		T1131	42052987	REAR	651	401	20x46	20x46	82



KLÖTZE TECH	SACHS		OEM	FRONT/REAR	MAXIMUM	MINIMUM	TOP	LOWER	PAGE
KT29366	112555 131206	V2106 -V2107	2997267 - 504052221 - 98408702 9841158 - 99451728 - 504063456 504148138 - 98464210 - 99451744	FRONT	664	394	16x38	16x38	82
KT29347	125938	T1244	04859825 - 98408706 - 98415096 - 504148145 98408707 - 98408709 - 98411167 - 98411172 98419046 - 98445162 - 98482154 - 99465078 99465079 - 99465081 - 99465082	FRONT	686	407	M14x67	20X46	82
KT27666		T1270	41033735 99488017	FRONT	805	465			83
KT29350	314921 125889	T5267	41218432 98498740 99474638	REAR	840	495	20x55	20x55	83
KT29823		T1307	99458562 93163957	REAR	621	394	20x46	20x46	83
KT29384	125931	T1264	41218443 - 98414527 98475501 - 98485037 - 98485038 99474645 - 99474649	FRONT	593	380	16x50	16x50	83
KT29340		T5268	500310131 41033734	REAR	930	550	24x55	24x55	83
KT29381	125934 300023	T1354	98480455 99473748 99473798	FRONT	820	470	M14x69	16x50	83
KT43511	311197		99465092 98474682	REAR					84
KT29348	131255	T5252	98430151 98432436 99474620	FRONT	735	427			84
KT29370	123936 123937	V2105	98415098 - 98426865 99451736 - 99451739 504148140 - 4844580	FRONT	660	398	16x38	16x38	84
KT43512	131101		500314647 98431529 99448976	FRONT					84
KT43513	125403		41007947 - 98414530 98466168 - 99474631	REAR	720	410	M14x69	M14x72	84
KT29380	125933		41218442 98414526 99474647	FRONT	647	382	M14x77	16x50	84
KT29375	131906	V2136	500378189 - 504043876 - 500378190 504043882 - 504064993 - 504069580 504152184 - 5801345777	REAR	478	316			85
KT29370	125388	V2109	98426866 99451738 4858811	REAR	695	424	16x38	16x38	85
TK27628		T5264	41214698 99488018 41210787	REAR	776	467	20x55	20x55	85
KT29347	131164	T1245	500301936 98445861 99465083	FRONT	725	435			85
KT43514			43906	FRONT	618	381	16x38	16x38	85
KT43515	115897 115737	CB0093	41005918 - 500307352 - 500307353 41005917 - 500307354 - 500307355 500353511 - 500353513 - 500379694	REAR	378	300	M16x72	16x44	85
KT43516	315520	CB0154	500392874 - 504080349 504047432 - 504084379 504115381	FRONT	426	372	32x46	20x46	86
KT35608	311881 311882	CB0153	504084378 - 504115380 500392873 - 504080348	FRONT	436	372	32x46	20x46	86
KT35606	105424 - 105863 105864 - 105865 - 105840	CB0073	504228086 - 500348789 - 99454197 99433008 - 99433007 - 99454195 99454196 - 99433009 - 41005984	FRONT	268	196	14x34	16x34	86
KT35611	311878	CB0151	504080441 - 504057814 504057816 - 504084381	REAR	446	384	16x66	16x44	86
KT43517	311879 311880	CB0152	504055167 - 504055168 504080440 - 504084380 504115382	REAR	443	384	16x66	16x44	86
KT35613	115739 115727 115740	CB0095	41028759 - 41028760 - 500348797 500377861 - 41028761 - 41028762 500332741 - 500377859	REAR	400	350	16x66	16x44	86
KT43518	125157	CB0159	42001827 42001826	FRONT	325	265	14x45	14x45	87
TM35594	310820 731700000892	CB0137	500357351 2997823 500340705	FRONT	429	325	32x46	20x46	87
KT35601	313055	CB0219	504080540 2997842 504084382	REAR+FRONT					87
KT35595	311884 731700000277 7317000002845	CB0149	504060241 - 97383888 504060233 - 2997845	REAR	443	341	16x66	16x44	87
KT35599	115902 115731	CB0098	500307338 - 500352808 500379698 - 98472734 99438514 - 99455937	REAR	381	307	M16x72	16x44	87
KT35598	115743	CB0099	41028764 - 500348793 41028763 - 500377878 - H53:H54	REAR	398	324	16x66	16x44	87
KT35597	310821 731700135079	CB0136	500357352 500340706 500357353	REAR	332	252	20x46	20x46	88



TRUCK **SPARE PARTS**



KLÖTZE
TECHNIC

www.klotzetechnik.de

Gesuchte Europäische
Qualität

Klötze Technic ist ein in Deutschland ansässiger Hersteller und Lieferant von LKW-, Anhänger- und Bus-Ersatzteilen.

FOLLOW
US

#KLOTZETECHNIC